



LedSet User's Manual

V2.6.1



Contents

1. Interface	3
1.1. Option Menu	4
1.1.1. Screen Configuration	5
1.1.1.1. Instruction to Sender/ Receiver/ Display Connection.....	5
1.1.1.2. What is .RCG & .CON file	11
1.1.1.3. How to load a .RCG file	12
1.1.1.4. Generating a .CON file	14
1.1.2. Brightness	17
1.1.3. Calibration.....	18
1.1.4. Lock LED screen properties	21
1.1.5. Turn off the LED screen	22
1.1.6. Change password	23
1.1.7. Logout	24
1.2. Test Menu	25
1.3. Settings Menu	32
1.3.1. Tool.....	33
1.3.2. Software Setup	34
1.3.3. Hardware Setup (Upgrade)	35
1.3.4. Language.....	36
1.3.5. Schedule Table.....	36
1.3.6. Demonstration mode(reserved).....	38
1.3.7. ClearBlackLine(reserved)	38
1.4. Help Menu	38
1.5. Screen Configuration	39
1.6. Brightness	39
1.7. Calibration.....	39
1.8. Cabinet Monitoring.....	40
1.9. Multifunction Card.....	41
1.10. Hardware Information.....	42



About LedSet



LedSetV2.6 is a software for setup only, such as generating .RCG&.CON file, brightness control and monitor, etc. For playing videos or pictures, please use LEDStudio.

1. Interface

After installing and launching LedSet on your computer, you will see the following interface.

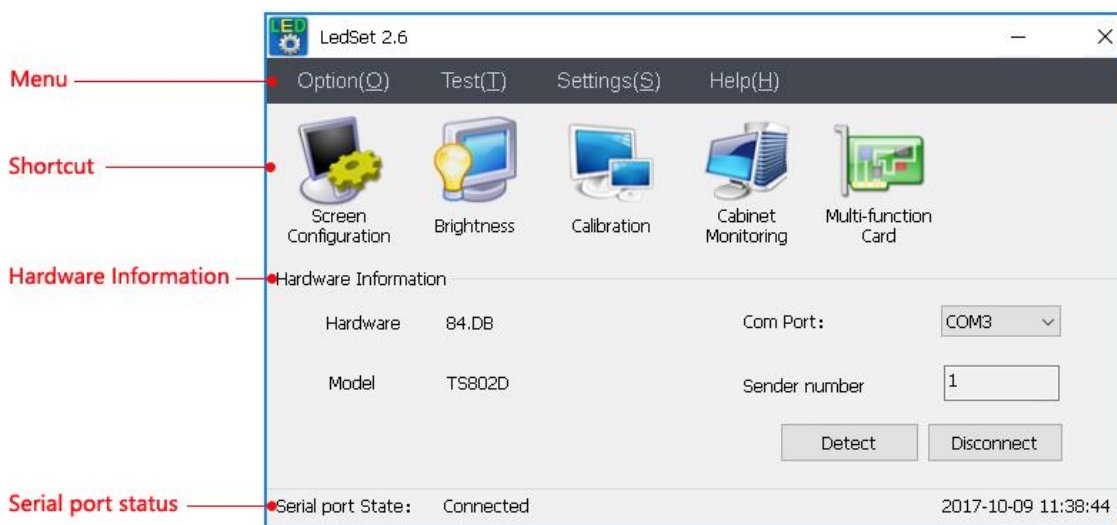


Figure 1

Note: You have to connect the USB cable from PC to sending card **before** you do the setup (such as generating .RCG&.CON file, brightness control and monitor and etc.).



1.1. Option Menu

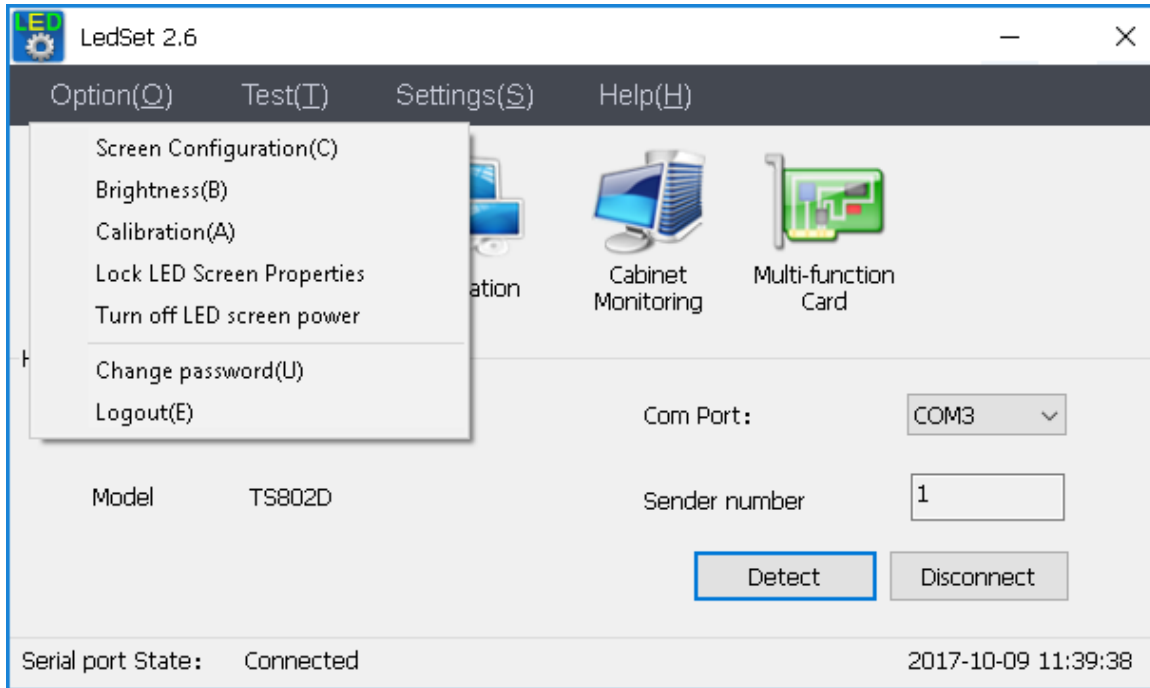


Figure 2

- **Screen Configuration:** to generate/adjust .RCG/.CON file via sender/receiver/display connection interface
- **Brightness:** to adjust brightness/contrast/color temperature/Gamma manually
- **Calibration:** a calibration remote server, works with LED Correction(Linsn's calibration software)
- **Lock LED Screen Properties:** to freeze what is currently being displayed on the LED screen
- **Turn off LED screen power:** works with multifunction board (EX902/EX906 and etc) to turn off the power of the LED screen; if no multifunction board connected, enabling this option will just turn off the video signal
- **Change password:** to manage the password for **Screen Configuration** and LedSet
- **Logout(E):** to prevent others from changing the settings in **Screen Configuration**



1.1.1. Screen Configuration

1.1.1.1. Instruction to Sender/ Receiver/ Display Connection

❖ Sender

Note: The key thing needs to be set on the sender page is **Resolution** when you are trying to set the sending card. Please adjust the resolution to the same as your computer's resolution. If you have video processor connected, please keep sender's resolution the same as the processor's output resolution. After everything is done, click **Save to sender**.

Hardware Setup

Sender Receiver Display Connection

Hardware

Hardware: 84.DB Model TS802D COM Port COM3 Sender No. 1 Check Hardware

Display Mode

Resolution 1920X1080 Sender frequency 60 Display frequency: 60.115HZ Custom Apply

Screen Parameters

Set width 800 Start X 0 Start Y 0 Width coefficient 1 Height coefficient 1

Manual brightness 16 32 64 Screen power Auto on/off off

Rotation 0 90 180 270 Mirror

Other Options

Enable Brightness Calibration Monitoring Card/Cabinet Enable LED Error Detection Enable Auto-adjust Brightness Enable receiver read back Broadcast receiver card config Broadcast display connection

Default Save to Sender Advanced

Figure 3

- **Hardware**

If the sending card communicates with the PC well via the USB cable, information of **Hardware** and **Model** will be shown as in figure below.

Hardware

Hardware: 84.DB Model TS802D COM Port COM3 Sender No. 1 Check Hardware

Figure 4



If 00.DB and Unknown appears like the following figure, please check the USB connection before you do the setup.



Figure 5

- **Display Mode**

This option is to set the resolution/frequency of the sending card. Commonly keep it the same as your monitor's/video processor's output.

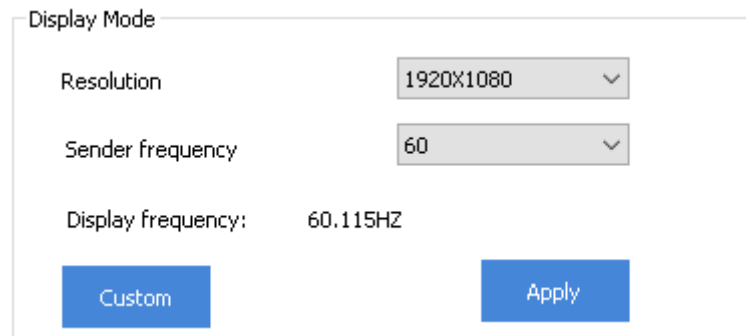


Figure 6

- **Other options**

- Enable Calibration: select it to use the loaded calibrating data
- Monitoring Card/Cabinet: select it enable the **Cabinet Monitoring** function
- Enable LED Error Detection: requires the LED module to use pixel-detection IC and new type of receiving card
- Enable Auto-adjust Brightness: select it to enable the auto- adjusting brightness function
- Enable receiver read back: reserved
- Broadcast receiver readback: reserved
- Broadcast display connection: reserved

- **Screen Parameters**

- Set width: use in some situation
- Start X/Y: set the coordinate of the display area
- Width/Height Coefficient: zoom in image of the desktop
e.g. If you have a LED screen whose size is 512*256 pixels, and the resolution of you monitor is 1024*768 pixels. For zooming in the image of the monitor to fit into the LED screen, you need to: a.Calculate width coefficient=512/1024= 0.5; height coefficient=256/768=0.33. b.Input the width and height coefficient respectively. c. Click **Save on Sender**
- Manual brighness: set the brightness asjustment scale for sender box



- Screen power: **Auto on/off** is set by default

Screen Parameters

<input type="checkbox"/> Set width	800
Start X	0
Start Y	0
Width coefficient	1
Height coefficient	1
Manual brightness	<input checked="" type="radio"/> 16 <input type="radio"/> 32 <input type="radio"/> 64
Screen power	<input checked="" type="radio"/> Auto on/off <input type="radio"/> off

Figure 7

• Rotation

Rotate the image that the sending card connecting to.

❖ Receiver

Note: Do not click **Send to Receiver/Save to Receiver** if you are not familiar with Linsn's control system

Hardware Setup

Sender Receiver Display Connection

Module Info

Drive IC: General Scanning mode: Single-color 16 scan 16 rows/zone

File: Unknown file

Module Info

Load Capacity Setup

Actual width: 64 Actual height: 32

Cascade direction: From right to left

Card Mode: Normal

Out Mode: Normal

Data exchange

Effects Setup

Refresh FRQ: 528 Scan clock: 3.0 MHz Phase of clock: 15

Row blanking time: 300 ns Newline time: 5

Brightness efficiency (including blanking): 38.44%

Min OE width(>40ns): 1453 ns

Synchro refresh: Auto Hz

Duty ratio: 50 %

Gray level: 32 Level

Grey mode: low refresh-lower

Grey equalize: 0

High Quality

specify: 40 ns

Four-color exchange

Afterglow Blanking

Chroma space

Image control

Other setup

Intelligent setup

New framework

Param readback Load from file Save to file Send to Receiver Save to Receiver

Figure 8



- **Synchronous refresh:** Tick it to make the LED screen synchronize with computer, and refresh rate is multiple of graphic card frequency. If the module is using PWM IC, this option would be locked.
- **Scan clock:** It depends on the design and performance of the module. The better performance gets by higher scan clock, resulting in longer width of receiver supports. Generally 16.67 or 18.75 MHZ is recommended.
- **Gray level:** High gray level means high quality of display effect and stronger color expression of LED screen. Generally for dual-color screen 256 gray level is enough. For full-color screen, it is suggested to use 65536 (select high refresh mode in **Gray mode**).
- **Gray mode:** This can be switch between high and low refresh mode, in low refresh mode the refresh rate is lower, generally high refresh mode for full-color screen is recommended.
- **Row blanking time:** Effective value: 10-200000. If lower ghosting effect appears, changing this option can reduce it. Note: The higher low blanking time is lower brightness.
- **Actual width/height:** Load the **correct** .RCG file, before you send it to the receiver; please make sure that the actual width and actual height are the same with the panel of one receiver carrying. For example, you have a panel with W96*H96 pixels, so you have to input W96*H96 in software.

❖ Display Connection

Hardware Setup

Sender Receiver Display Connection

Setting Mode ☐ SOM Card ☒ Normal ☐ Complex

Display 1

Type: real pixel display

Sender No.: 1

Network port: 1(U) 2(D)

Selected Card information

Extension cable: 1

Order No.: 0

Width: 64

Height: 32

☒ Show Connection Lines

☒ single-point link ☐ Quick link

Receiver No.: 1

Horizontal card: 3 Vertical card: 1

1	2	3
No.:1-U-1	No.:1-U-1	No.:1-U-1
Order No.:3	Order No.:2	Order No.:1
Width:72	Width:72	Width:72
Height:72	Height:72	Height:72

☐ Compatible old program

Figure 9

- **Display QTY:** In most case just keep this to 1.



- **Receiver No:**

- Horizontal card : enter the number of the receiving cards in width (try clicking on the text box and scrolling the mouse wheel)
- Vertical card : enter the number of the receiving cards in height (try clicking on the text box and scrolling the mouse wheel)
- : to clear all the info(order/width/height) in each square
- : to clear the info(order/width/height) for the selected square
- : zooming out; zooming in; back to the original size

Receiver No.

Horizontal card Vertical card

	1	2	3	4	5	6	7	8
1	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
2	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0

Figure 10

- **Sender No/Network port/Selected Card information**

Sender No.

Network port

Selected Card information

Extension cable

Order No.

Width

Height

Figure 11

- **Sender No.:** If there is more than one sending card connecting, please select the corresponding number.
- **Network port:** There are two ports on the TS802D sending card. The one next to the LED lights is U, and the other one is D.

- **Order No.:** The receiving card that connects to sending card directly is the No.1 card (Note: stand in front of the LED screen when checking the order)
 - **Width:** Pixels' width that one receiving card connects.
 - **Height:** Pixels' height that one receiving card connects.
- Fill the above info depending on the real connection, click on a random square and the info will be filled out the selected square automatically.

Receiver No.

Horizontal card Vertical card

	1	2	3	4	5	6	7	8
1	No.:1-U-1 Order No.:1 Width:128 Height:128	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
2	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0

Figure 12

- **Show Connection Lines:** select it to show the linking direction in lines
- **Single-point link:** set the order one by one by clicking the corresponding square
- **Quick link:**
 - Select one of the eight direction modes below depending on the real connection

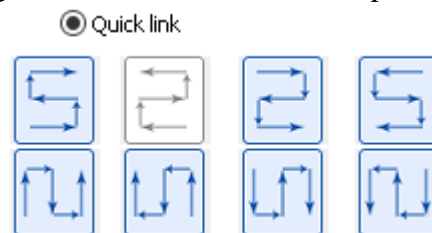


Figure 13

- Click the first square (stands for the **first** receiving card of the area that you need to set), hold down the left mouse button and drag it until the desired area is covered with black.

Receiver No.

Horizontal card Vertical card

	1	2	3	4	5	6	7	8
1	No.:1-U-1 Order No.:1 Width:128 Height:128	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
2	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0

Figure 14

- Release the mouse and the rest of the square will be filled out



Receiver No.

Horizontal card 8 Vertical card 2 All Reset

ⓧ ⏪ ⏩ 🔍 ⓧ

	1	2	3	4	5	6	7	8
1	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1
	Order No.:9	Order No.:10	Order No.:11	Order No.:12	Order No.:13	Order No.:14	Order No.:15	Order No.:16
	Width:128	Width:128	Width:128	Width:128	Width:128	Width:128	Width:128	Width:128
	Height:128	Height:128	Height:128	Height:128	Height:128	Height:128	Height:128	Height:128
2	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1	No.:1-U-1
	Order No.:8	Order No.:7	Order No.:6	Order No.:5	Order No.:4	Order No.:3	Order No.:2	Order No.:1
	Width:128	Width:128	Width:128	Width:128	Width:128	Width:128	Width:128	Width:128
	Height:128	Height:128	Height:128	Height:128	Height:128	Height:128	Height:128	Height:128

Figure 15

- **Send to receiver:** click it after you finish the setup
- **Save to receiver:** if the image is working on the LED screen, please click it to save the data to the receiver
- **Save to file:** you can also save the settings as a .CON file, so that you can just load the setting as you need it next time.

Note: go to [page14-16](#) to check how to make a .CON file.

1.1.1.2. What is .RCG & .CON file

.RCG file is used to configuring the image of each single receiving card, and the .RCG file is already saved on each receiving card normally when you get the whole set of LED screen and control cards from the supplier. So the first time you set up the LED screen, you will get several repeated images whose number is the same as the number of the receiving cards (e.g. If you have 40 receiving cards, then you will have 40 repeated images on the LED screen). The LED screen below is working with correct .RCG file saving (showing repeated images of the top-left part on your desktop).



Figure 16



After you assemble the whole LED screen, you need to send a .CON file, in order to make the whole LED screen show image in one piece. You will get the perfect image below after sending a .CON file to the above LED screen.

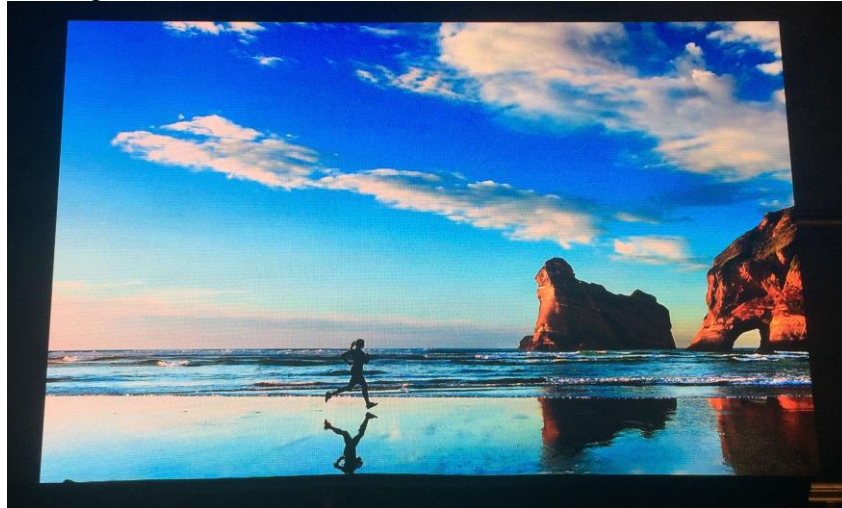


Figure 17

1.1.1.3. How to load a .RCG file

Note: Please do not send any random .RCG file to the cards if you are not familiar with Linsn's control system.

Procedure:

- a. Connect all the components well (PC->sending card->receiving card->LED screen)
- b. Click **Screen Configuration** to enter **Sender** tab, set the **Resolution** to the same as your PC's monitor and click **Save to Sender**. Go to the resolution settings interface on your PC and select the **duplicate/clone mode**.

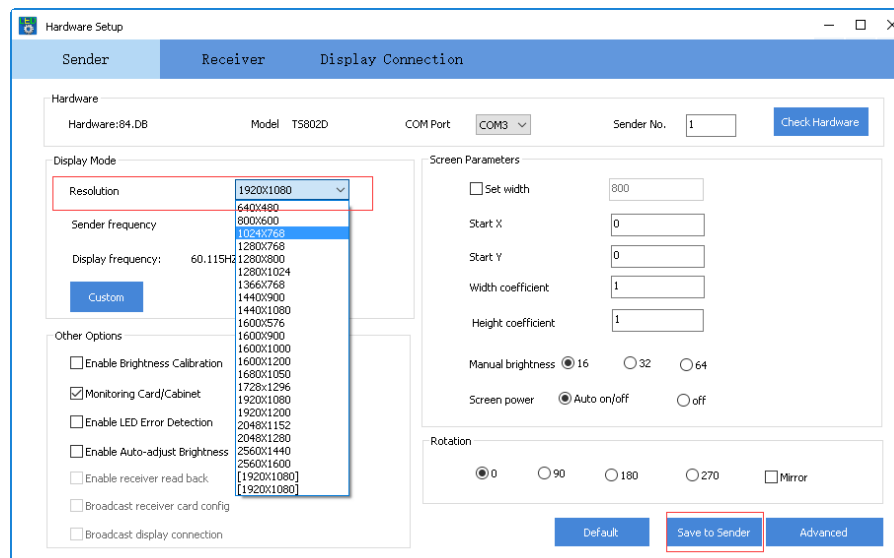


Figure 18

- c. Go to the **Receiver** page. Load the .RCG file from **Load from file** and click **Send to Receiver** to see if one cabinet is working or not. If working, click **Save to Receiver** (this button will be enabled after clicking **Send to receiver**)

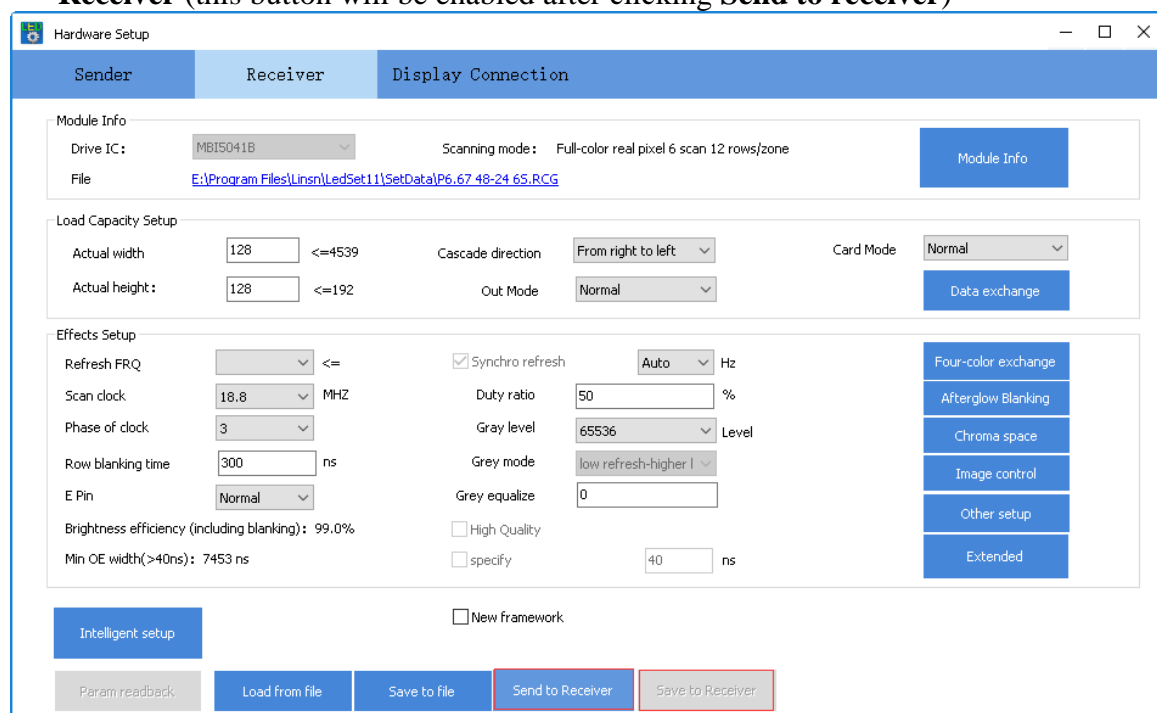


Figure 19

- d. If the settings you adjusted are working, click **Save to file** to save the settings to an .RCG file, so that you can load the settings directly when you need it.



1.1.1.4. Generating a .CON file

Note: Please stand in front of the LED screen when you are checking the connecting direction of receiving cards.

After sending the corresponding .RCG file to the receivers, correct and repeated images will be shown on each cabinet as in the following picture.



Figure 20

For connecting all the repeated images above together, you need to do:

Display 1 Display QTY 1 Update display QTY Operation

Type: real pixel display GAMA

Sender No. 1

Network port: 1(U) 2(D)

Selected Card information

Extension cable: 1

Order No.: 1

Width: 128 ↔ ↕

Height: 128 ↔ ↕

☐ Show Connection Lines

☐ single-point link

☒ Quick link

↻ ↻ ↻ ↻ ↻ ↻

Receiver No.

Horizontal card: 6 Vertical card: 4 All Reset ⌂ ↶ ↷ ⌕ ⌕ ⌕

	1	2	3	4	5	6
1	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
2	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
3	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
4	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0

Calibration Panel FLASH Send color calibration data Save color calibration data Load Data

Param readback Load from file Save to file Send to receiver Save to receiver ☐ Compatible old program

Figure 21

a. Input 6 in **Horizontal card**, and 4 in **Vertical card**



- Select U if the **network port** near the LED light on the sending card is connected
- Input 128 (pixels) in width and height separately (the above cabinet is 128*128 pixels)
- Click on the square that corresponds to the first receiving card, and click the second square stands for the second receiving card till all the squares are covered if you select **single-point link**

Sender No.

Network port

Selected Card information

Extension cable

Order No.

Width

Height

☐ Show Connection Lines

☒ single-point link

☐ Quick link

	1	2	3	4	5	6
1	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
2	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
3	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
4	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:1 Width:128 Height:128

Figure 22

Sender No.

Network port

Selected Card information

Extension cable

Order No.

Width

Height

☐ Show Connection Lines

☒ single-point link

☐ Quick link

	1	2	3	4	5	6
1	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
2	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
3	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0
4	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:0 Width:0 Height:0	No.:1-U-1 Order No.:2 Width:128 Height:128	No.:1-U-1 Order No.:1 Width:128 Height:128

Figure 23



You can also select **Quick link** to finish the setup (see [page10-11](#) for detailed skills to set quick link).

Type: real pixel display

GAMA

Sender No.

1

Network port

1(U) 2(D)

Selected Card information

Extension cable: 1

Order No.: 1

Width: 128

Height: 128

☐ Show Connection Lines
☐ single-point link
☒ Quick link

Receiver No.

Horizontal card: 6

Vertical card: 4

All Reset

	1	2	3	4	5	6
1	No.:1-U-1 Order No.:19 Width:128 Height:128	No.:1-U-1 Order No.:20 Width:128 Height:128	No.:1-U-1 Order No.:21 Width:128 Height:128	No.:1-U-1 Order No.:22 Width:128 Height:128	No.:1-U-1 Order No.:23 Width:128 Height:128	No.:1-U-1 Order No.:24 Width:128 Height:128
2	No.:1-U-1 Order No.:18 Width:128 Height:128	No.:1-U-1 Order No.:17 Width:128 Height:128	No.:1-U-1 Order No.:16 Width:128 Height:128	No.:1-U-1 Order No.:15 Width:128 Height:128	No.:1-U-1 Order No.:14 Width:128 Height:128	No.:1-U-1 Order No.:13 Width:128 Height:128
3	No.:1-U-1 Order No.:7 Width:128 Height:128	No.:1-U-1 Order No.:8 Width:128 Height:128	No.:1-U-1 Order No.:9 Width:128 Height:128	No.:1-U-1 Order No.:10 Width:128 Height:128	No.:1-U-1 Order No.:11 Width:128 Height:128	No.:1-U-1 Order No.:12 Width:128 Height:128
4	No.:1-U-1 Order No.:6 Width:128 Height:128	No.:1-U-1 Order No.:5 Width:128 Height:128	No.:1-U-1 Order No.:4 Width:128 Height:128	No.:1-U-1 Order No.:3 Width:128 Height:128	No.:1-U-1 Order No.:2 Width:128 Height:128	No.:1-U-1 Order No.:1 Width:128 Height:128

Calibration

Panel FLASH

Send color calibration data

Save color calibration data

Load Data

Param readback

Load from file

Save to file

Send to receiver

Save to receiver

Figure 24

- After filling out all the squares, click **Send to receiver**. Don't forget to click **Save to Receiver** if the image is working well on the LED screen.
- You can save the above settings as a .CON file, and load it when you need it.



1.1.2. Brightness

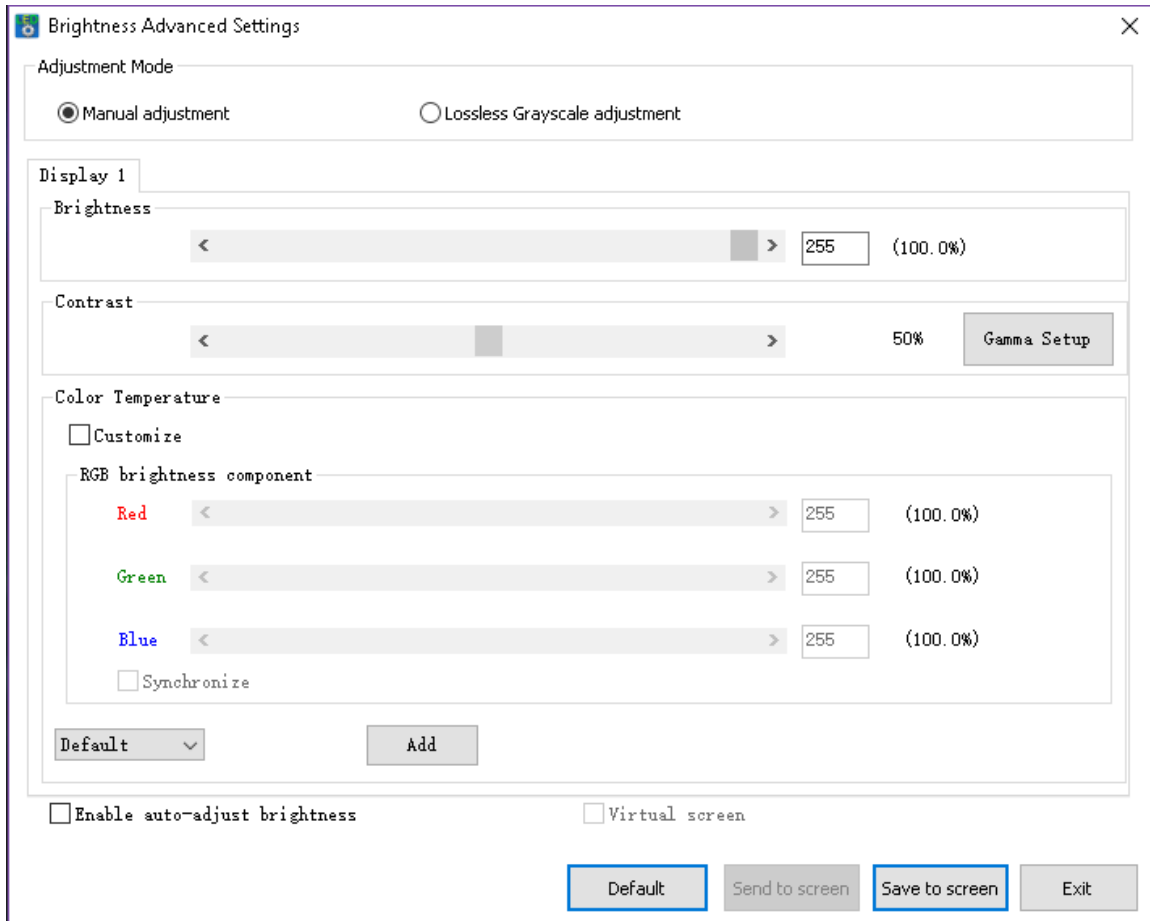


Figure 25

- Brightness: adjust the brightness manually
- Contrast: adjust the contrast manually
- Color Temperature
 - Customize: check to enable RGB brightness component
 - RGB brightness component: Adjust brightness of red, green and blue manually
 - Add: Customize the color temperature that you need, ranging from 1000K to 40000K
- Enable auto-adjust brightness: Enable adjusting brightness automatically by multifunction card



1.1.3. Calibration

This is a remote calibration sever which works with the LED Correction software. It is designed for the LED screen which is installed high or with large resolution but needs calibration in a far distance.

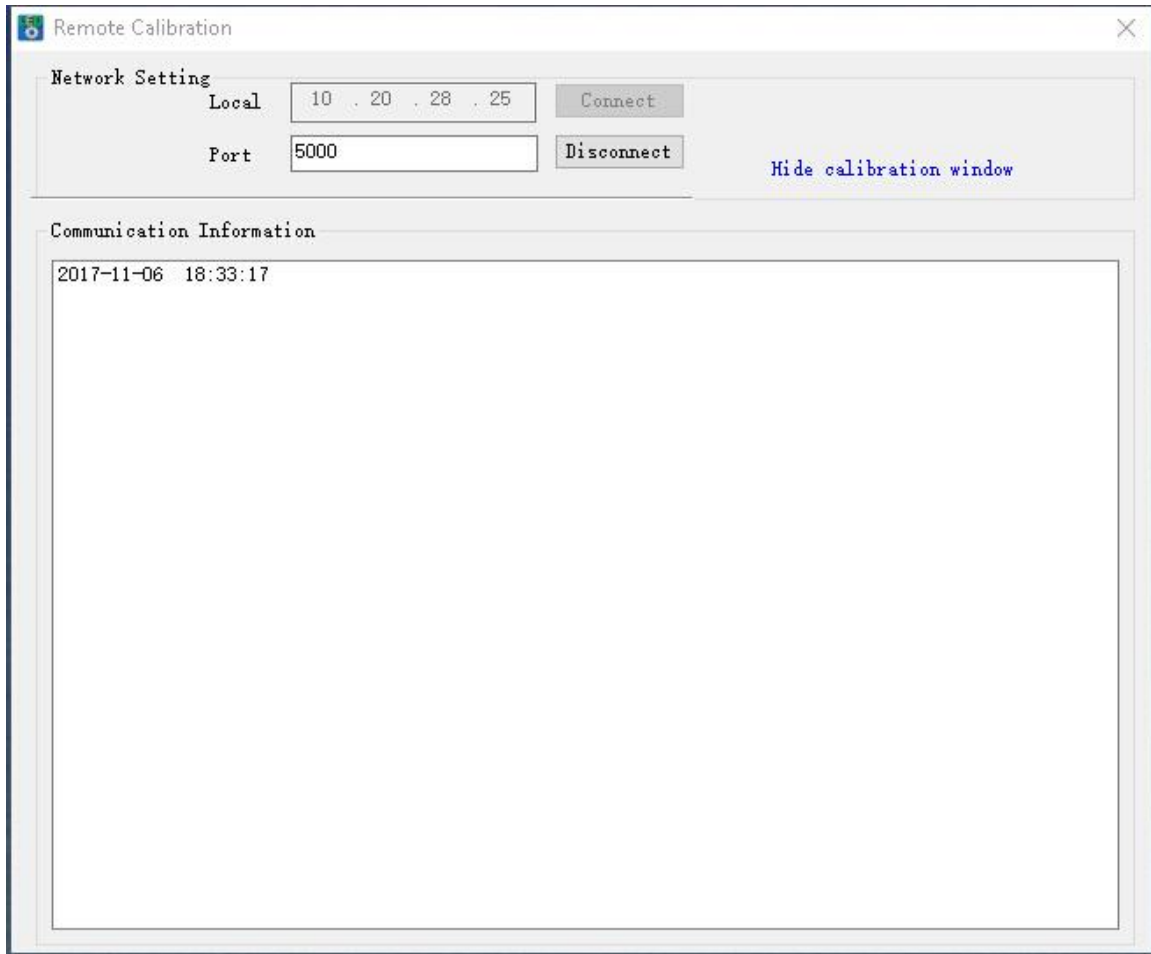


Figure 26

- Network Setting:
 - Local: IP address of the server which is connecting to the LED screen
 - Port: Communication port (Keep it default)
- Communication Information: Showing connection status of the server and client.

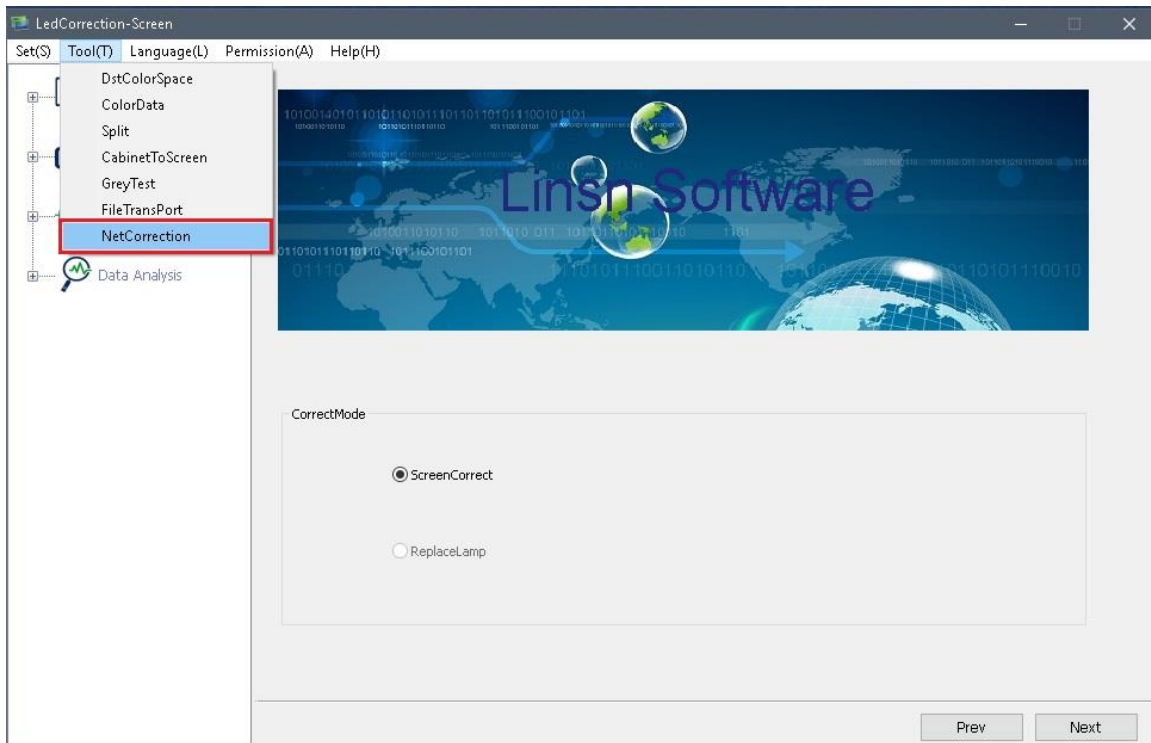


Figure 27

Run **LED Correction** software on client computer -> Click **Tool** -> select **Net Correction**

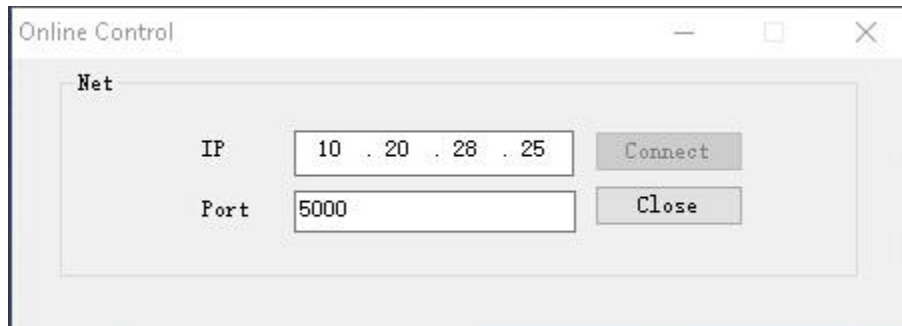


Figure 28

- IP: IP address of server which is connecting to the LED screen
- Port: Communication port (Keep the default value)

When the it is connected successfully, the connection status will be shown in LedSet as the picture below

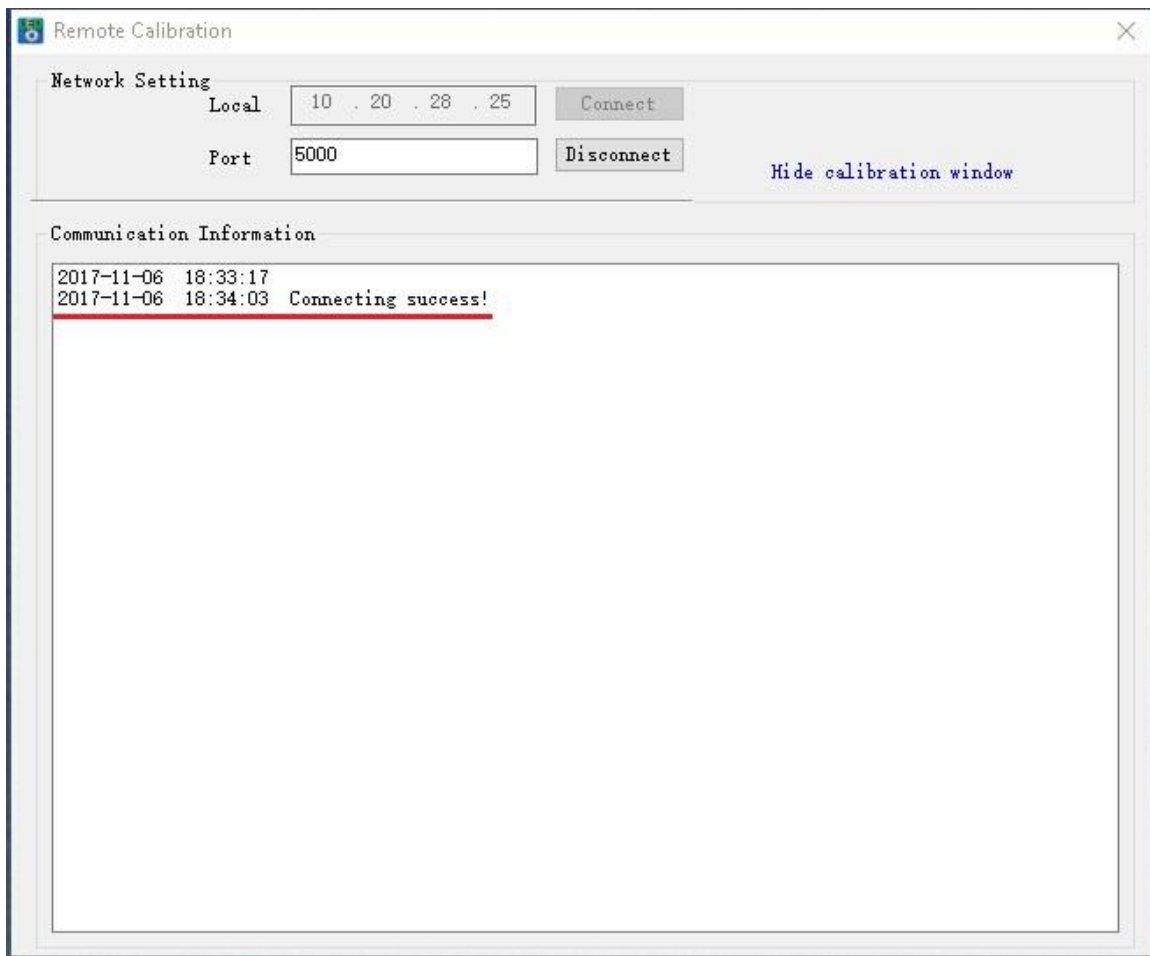


Figure 29

After the above connection, you can do the calibration for the LED screen which is installed far away on the client PC.



1.1.4. Lock LED screen properties

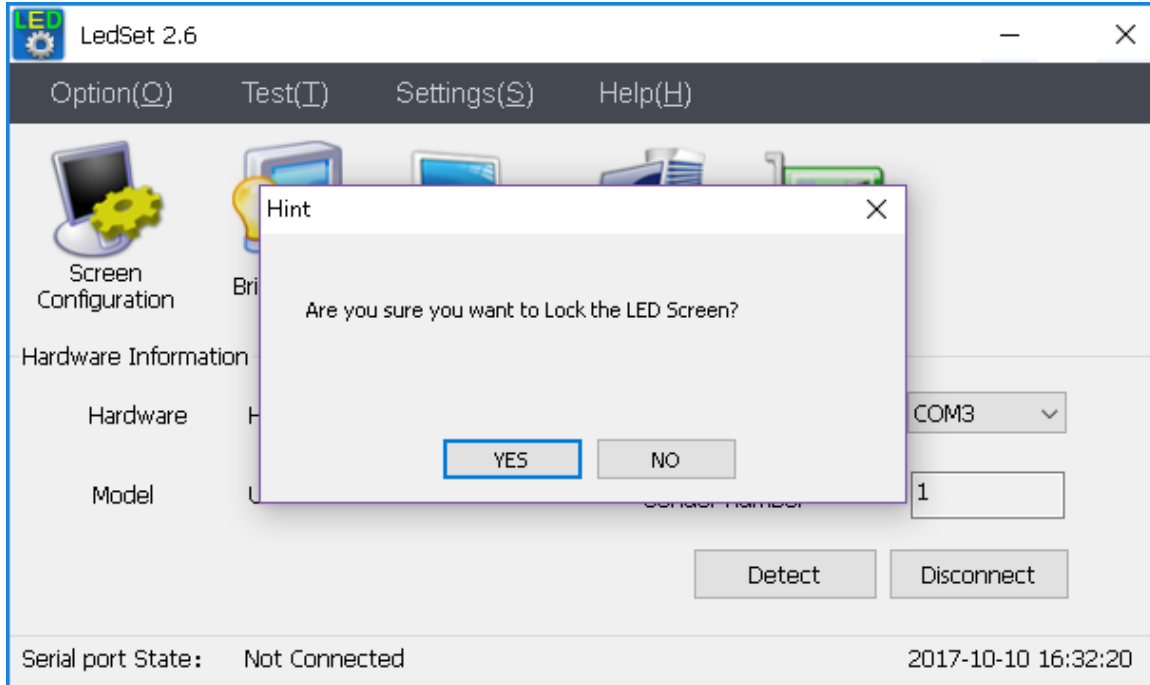


Figure 30

- Go to **Option->Lock LED screen properties->Hint**
- Click **YES** to freeze the image on the LED screen and the button will turn into **unlock the LED screen properties**. You can click **unlock the LED screen properties** to resume the action on the LED screen.



1.1.5. Turn off the LED screen

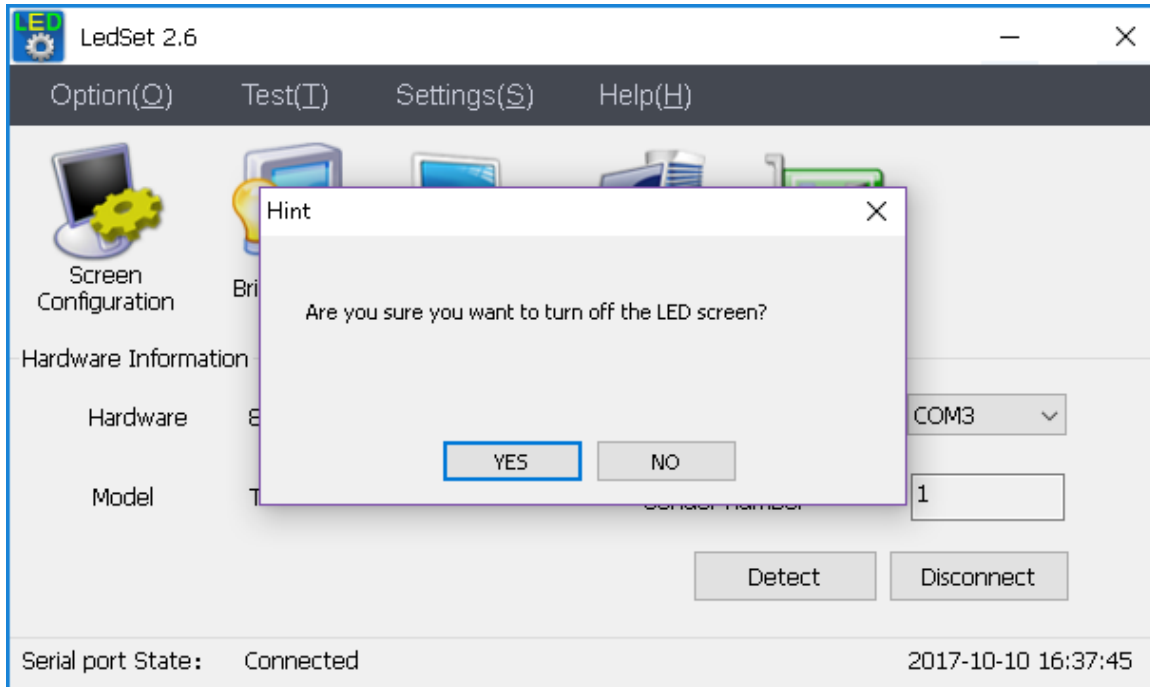


Figure 31

This function requires multifunction board (like EX902, EX906 and etc).

After connecting the power supply for the LED screen to the relays on the multifunction board, you can turn off the power of the LED screen by LedSet:

- a. Go to **Option->Turn off the LED screen->Hint**
- b. Click **YES**
- c. The button will turn into **Turn on the LED screen**

Note: If you don't have multifunction board connected, it will cut off the video signal (indicated by green light on the sending card) rather than power by using this function.



1.1.6. Change password

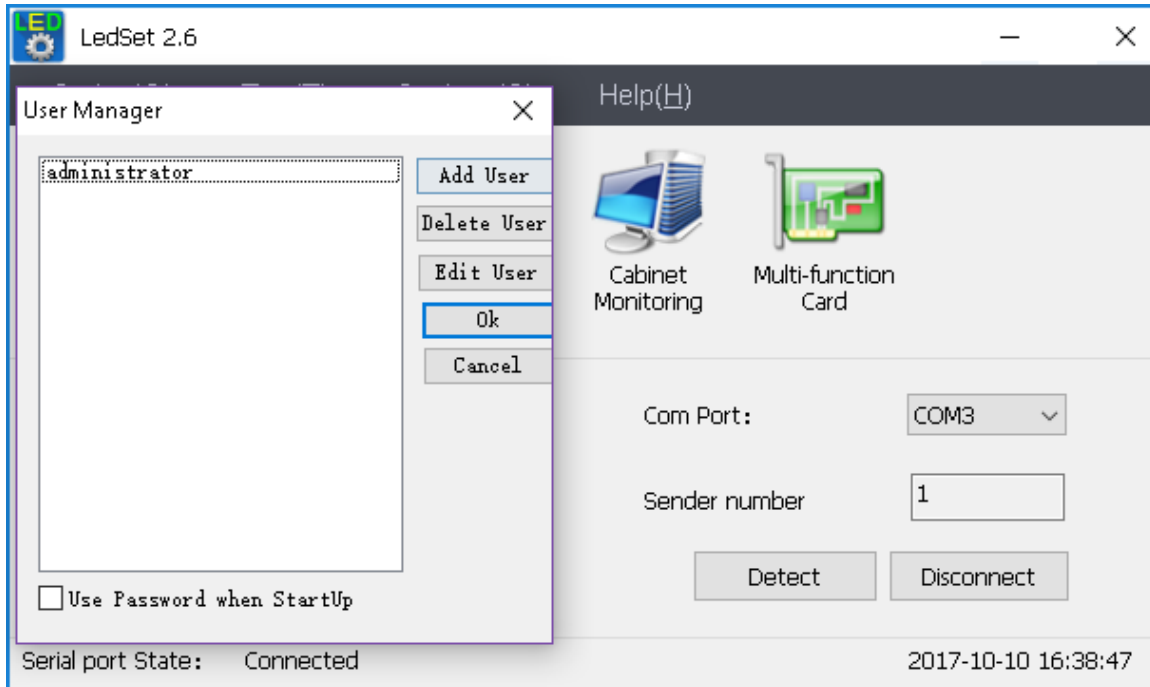


Figure 32

- **Add User:** add a new user name and password
- **Delete User:** delete the selected user
- **Edit User:** edit the name and password for the selected use
- **Ok:** click ok to finish the setup
- **Cancel:** click cancel to exit
- **Use Password when StartUp:** it requires enter password when the software starts up



1.1.7. Logout

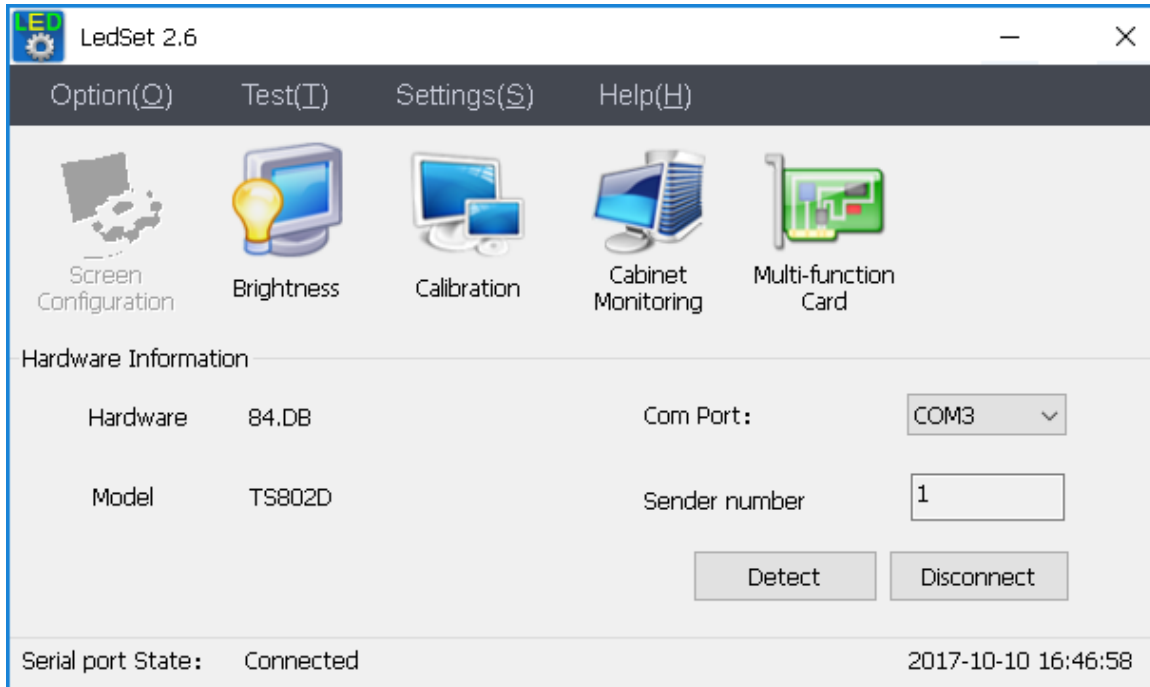


Figure 33

To prevent others from changing the settings by accident, you can click logout to disable the **Screen Configuration** feature.



1.2. Test Menu

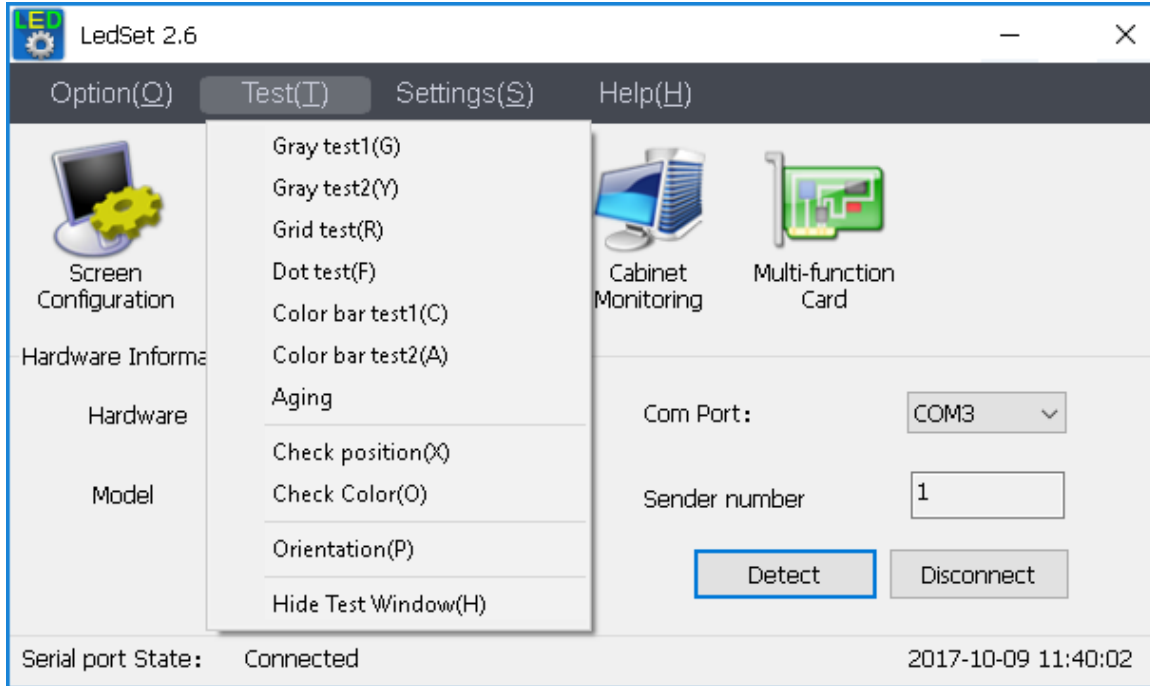


Figure 34

- **Grey test1**
It will shows the selected color's grayscale from level 1 to 255 automatically.
- **Grey test2**
You can select to show a specific grayscale.

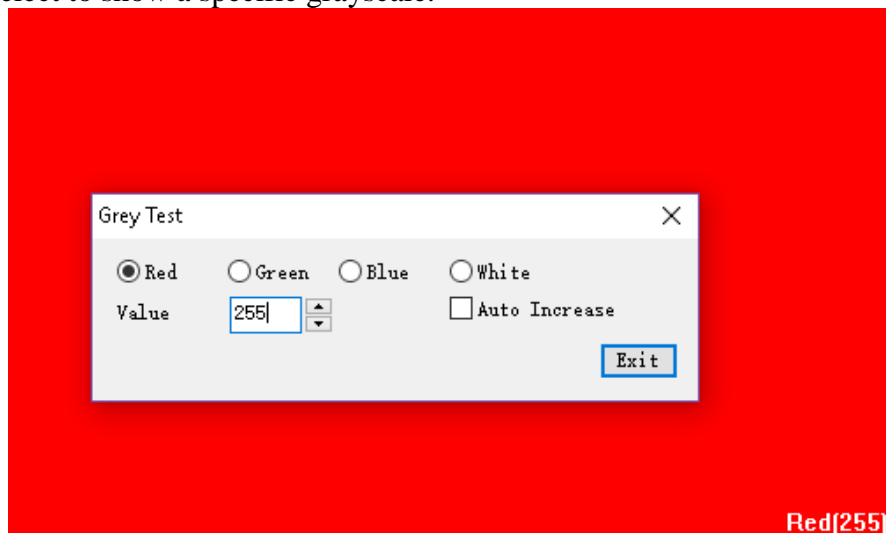


Figure 35

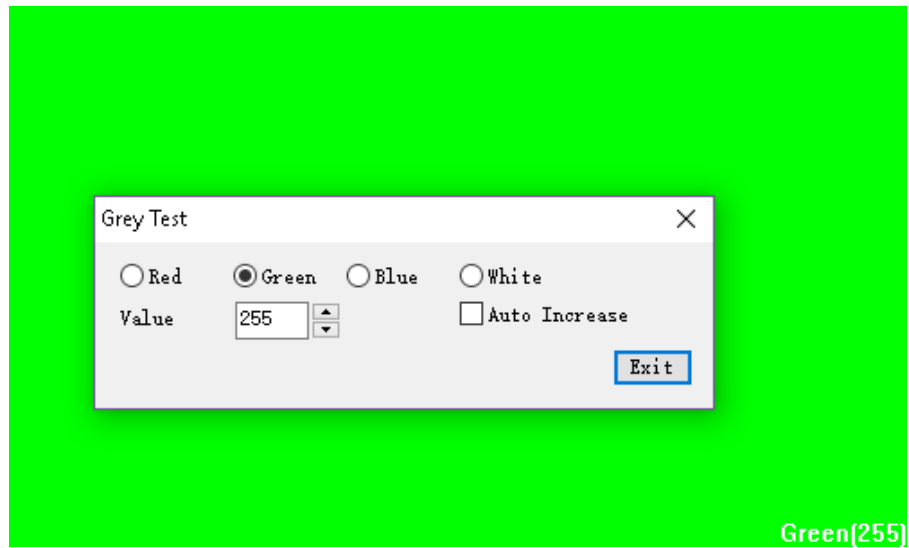


Figure 36

- **Grid test**

For testing the pixels' movement on the LED screen.

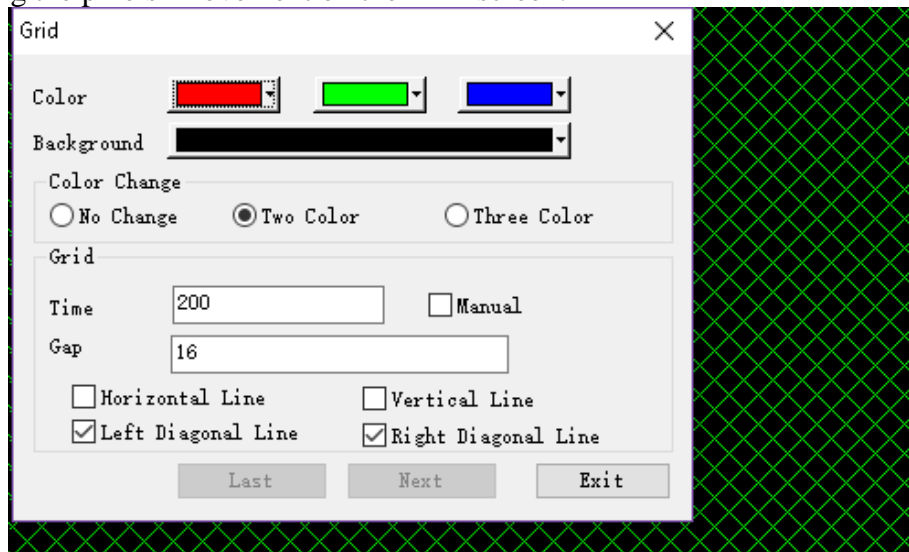


Figure 37

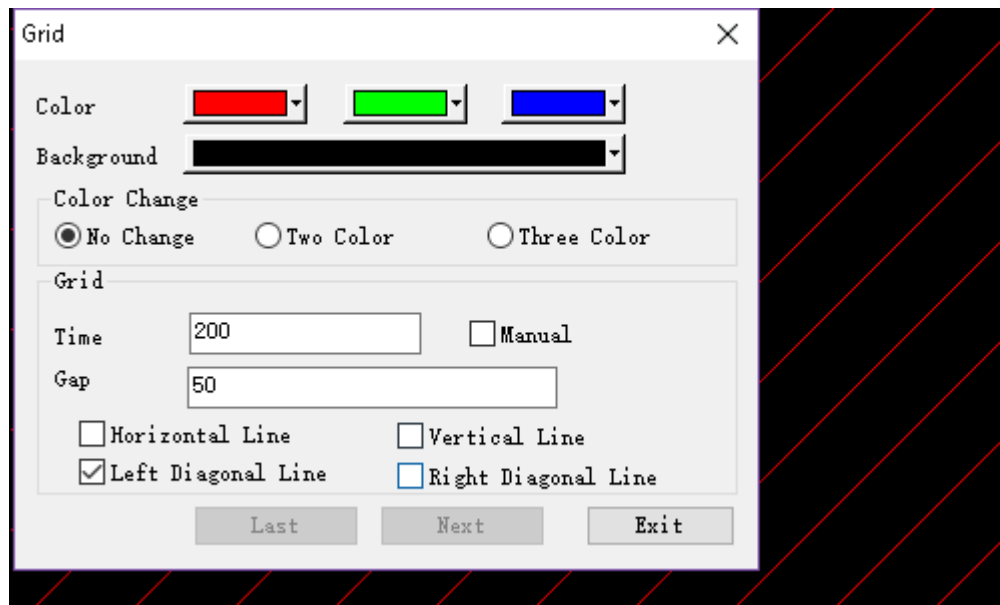


Figure 38

- **Dot test**

A quick way to check if there is faulty pixel on the LED screen.



Figure 39

- **Color bar test1**

For testing different grayscale of different color (internal use)

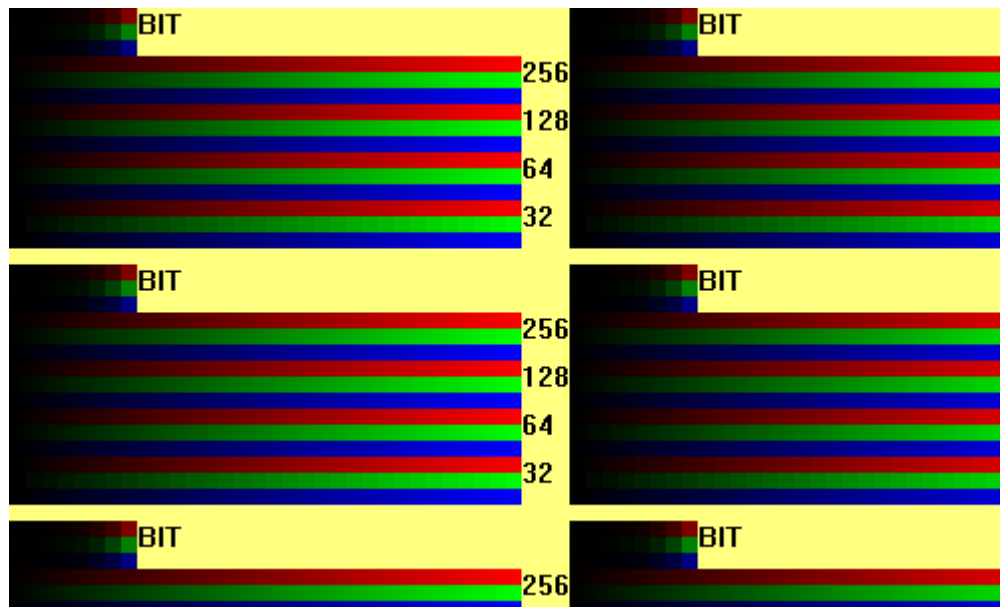


Figure 40

- **Color bar test2**

Grayscale test pattern for Red/Green/Blue/White


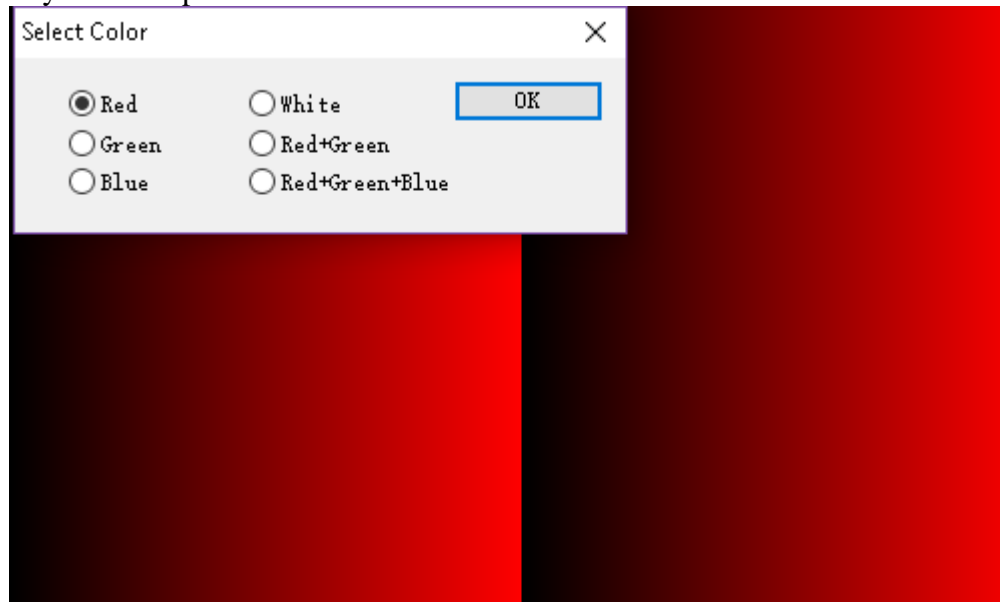


Figure 41

- **Aging**

For customizing an aging pattern

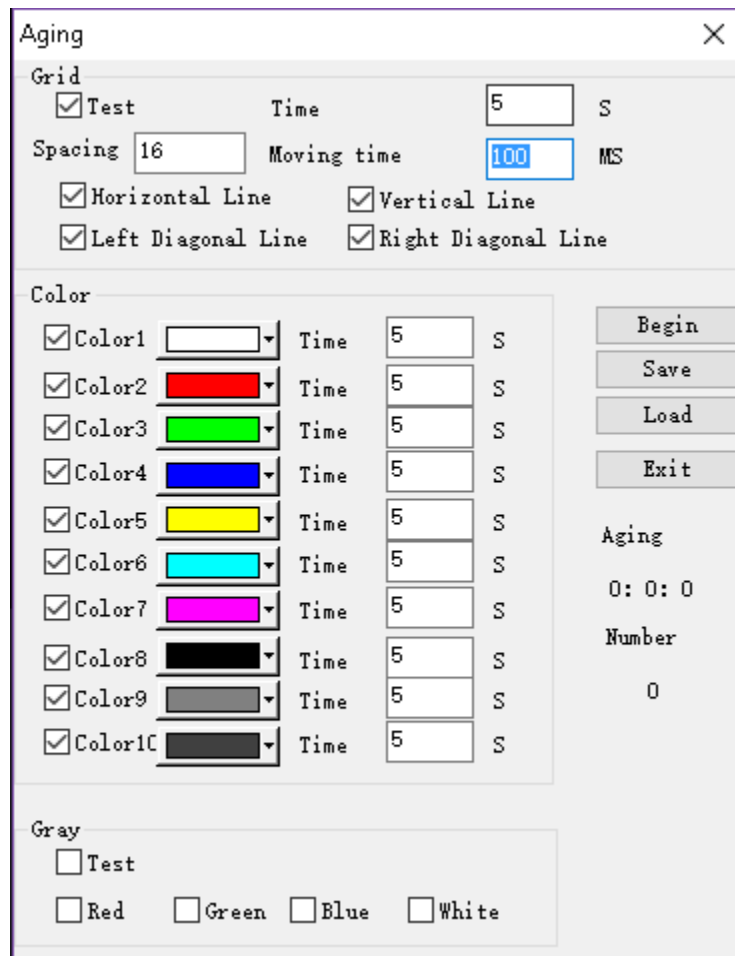

The 'Aging' dialog box is divided into several sections. The 'Grid' section includes checkboxes for 'Test', 'Horizontal Line', 'Left Diagonal Line', 'Vertical Line', and 'Right Diagonal Line'. It also features input fields for 'Time' (set to 5) and 'Spacing' (set to 16), along with a 'Moving time' field (set to 100) and a unit 'MS'. The 'Color' section contains ten color swatches (Color1 to Color10) with corresponding 'Time' and 'S' fields, all set to 5. The 'Gray' section has a 'Test' checkbox and four color options: 'Red', 'Green', 'Blue', and 'White'. On the right side, there are buttons for 'Begin', 'Save', 'Load', and 'Exit', along with a status area showing 'Aging', '0: 0: 0', and 'Number 0'.

Figure 42

- **Check position**

For checking the showing area and the area for each data sets



Figure 43

- **Check color**



For reading RGB color codes

- **Orientation**

This function is for locating the faulty module/cabinet/card.

Figure 44

- **Window**

X: start x of play window, and keep it to 0 commonly

Y: start y of play window, and keep it to 0 commonly

Width: pixels' width of play window, and keep it the same as your LED screen

Height: pixels' height of play window, and keep it the same as your LED screen

Figure 45



- **Module**

Width: pixel's number of one module in width

Height: pixel's number of one module in height

Module	
Width	16
Height	16

Figure 46

- **Loading Module of Receiving Card**

The number of modules that connected to one receiving card in height and width

Loading Module of Receiving Card	
Row	8
Col	8

Figure 47

- **Color and Size**

Color and Size	
Module Line	<div><div></div>1</div>
Receiving Card Line	<div><div></div>2</div>
Font Color	<div><div></div>7</div>
Background color	<div><div></div></div>

Figure 48

- **Orientation:** Click it to update the contents
 - a. Set the pixels' width and height for module and LED screen, and the number of the modules that connected to one receiving card.
 - b. Click **Orientation** to update your settings.
 - c. The display window will show the grids on the LED screen for you to recognize each

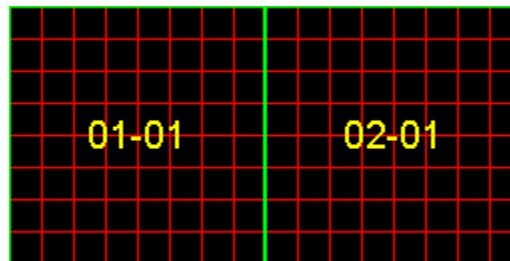


Figure 49

- **Hide test window:** to hide/show the above window

1.3. Settings Menu

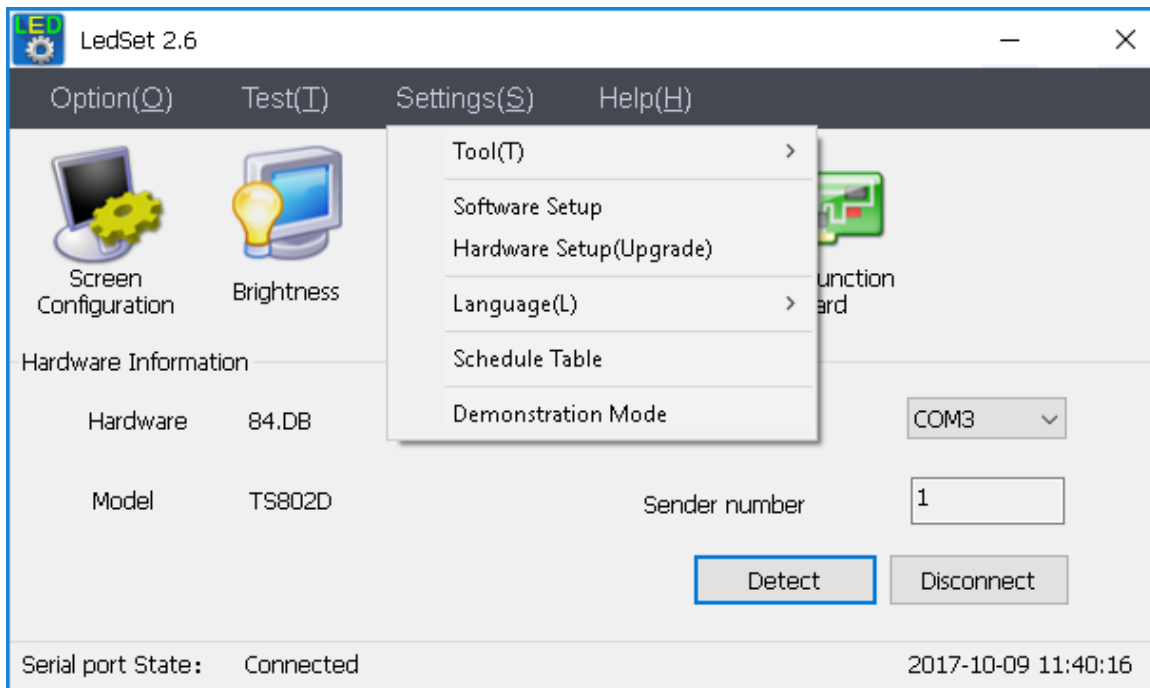


Figure 50

- Tool: Paint/Notepad/Calculator
- Software Setup: Other settings for software
- Hardware Setup(Upgrade): For upgrading the firmware
- Language: Other languages
- Schedule Table: For timing settings



1.3.1. Tool

For opening Paint, Notepad and Calculator.

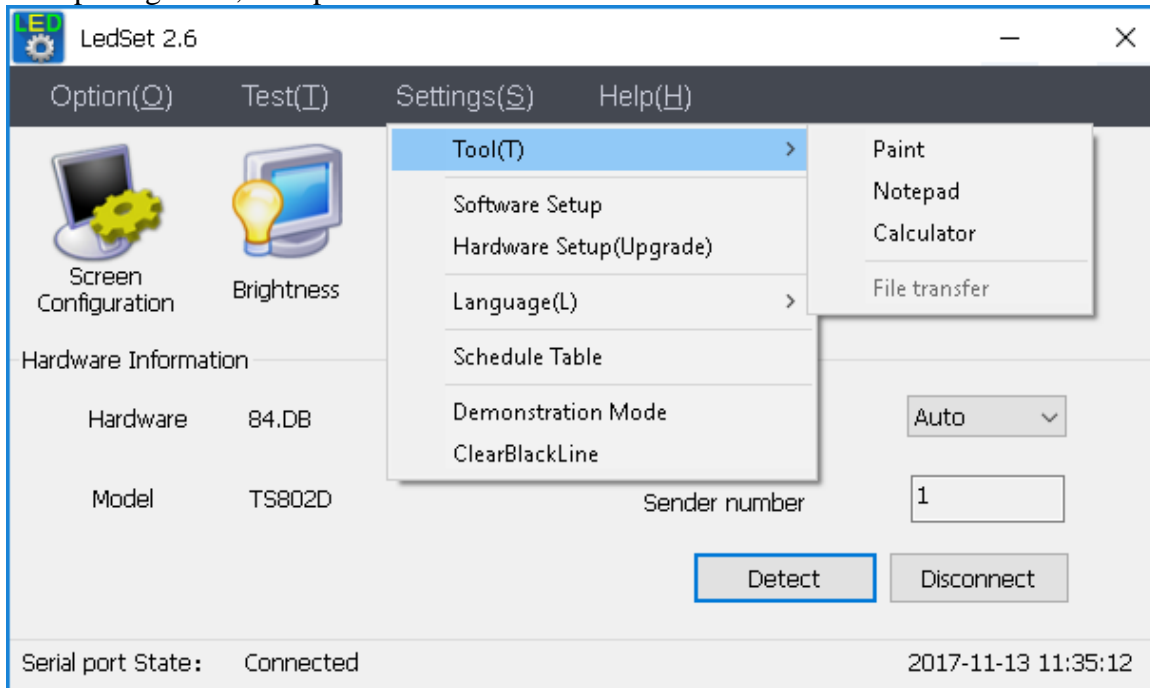


Figure 51

Open Paint/Notepad/Calculator (Window's program) in LedSet



1.3.2. Software Setup

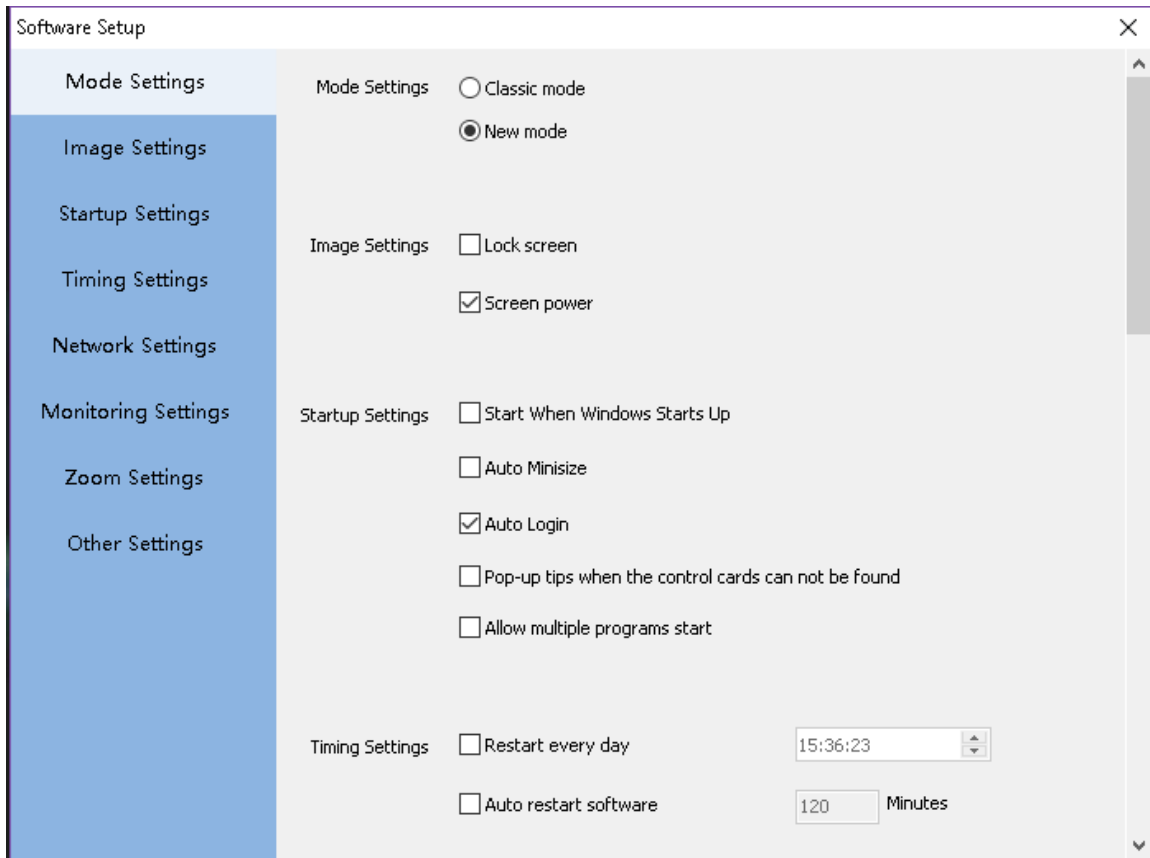


Figure 52

- Mode Settings:
 - Classic mode
 - New mode(recommended)
- Image Settings:
 - Lock screen: this option is unchecked by default, and you can check it to freeze the image of LED screen (same as Option->Lock LED screen properties, please check [page21](#) for detailed instructions)
 - Screen power: this option is checked by default, and you can uncheck it to turn off the power(same as Option->Turn off LED screen power, please check [page22](#) for detailed instructions)
- Startup Settings:
 - Start When Windows Starts Up: auto-start LedSet when your PC starts up
 - Auto Minimize: auto-minimize the software when launching LedSet
 - Auto Login: this option is checked by default, and you can uncheck it to keep logging out the software (same as Option->Logout, please check [page24](#) for detailed instructions)



- Pop-up tips when the control cards cannot be found: check to show the prompt when the USB connection cannot be recognized.

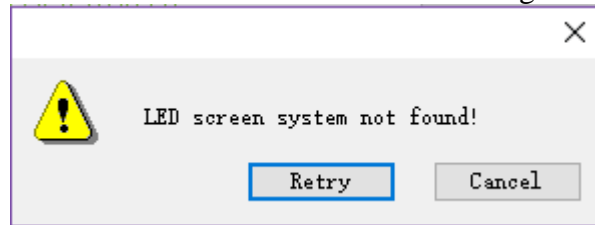


Figure 53

- Allow multiple programs start: allow open several LedSet
- Timing Settings:
 - Restart every day: set to restart the software at certain time for every day
 - Auto restart software: restart the software every certain period of time
- Network Settings: Reserved
- Monitoring Settings
- Zoom Settings: Enable zoom-> When the resolution-height is less than a certain value
- Other Settings:
 - Auto restart software when fault occurs
 - Show prompt message when quit
 - No error message: to disable the 'LED screen system not found' prompt
 - Not allow closing software
 - Power off when close
 - Auto Update new software: reserved

1.3.3. Hardware Setup (Upgrade)

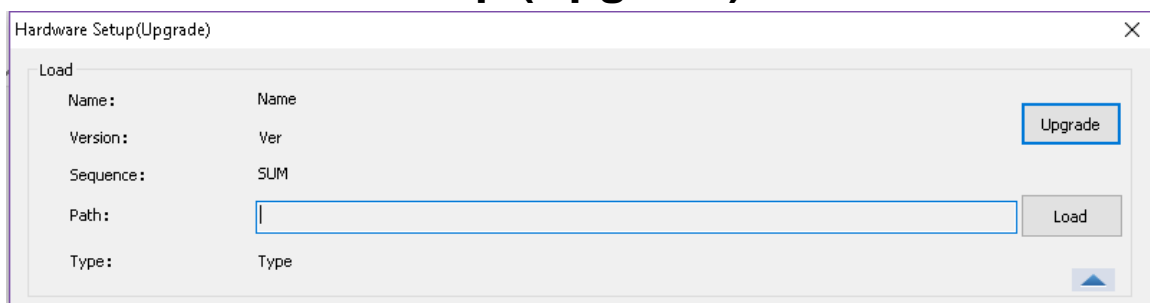


Figure 54

- Go to **Settings->Hardware Setup->Input password-> Click Load** to select a correct firmware->**Upgrade**
- Power off and on the cards to check if the upgrade works or not



1.3.4. Language

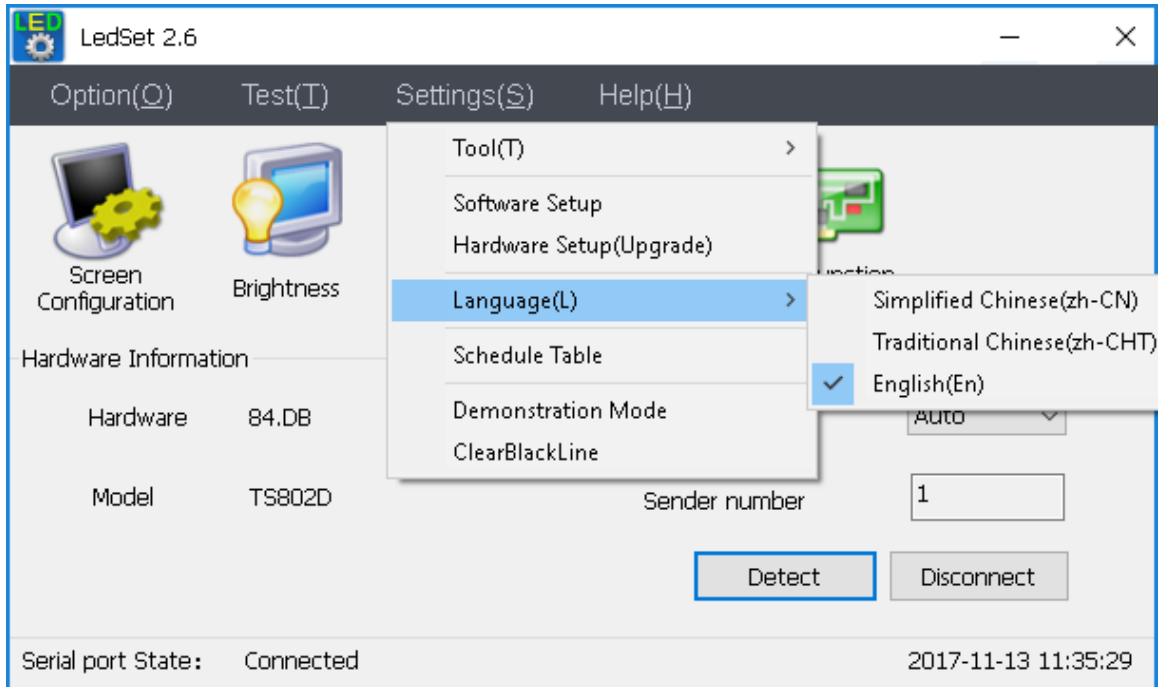


Figure 55

1.3.5. Schedule Table


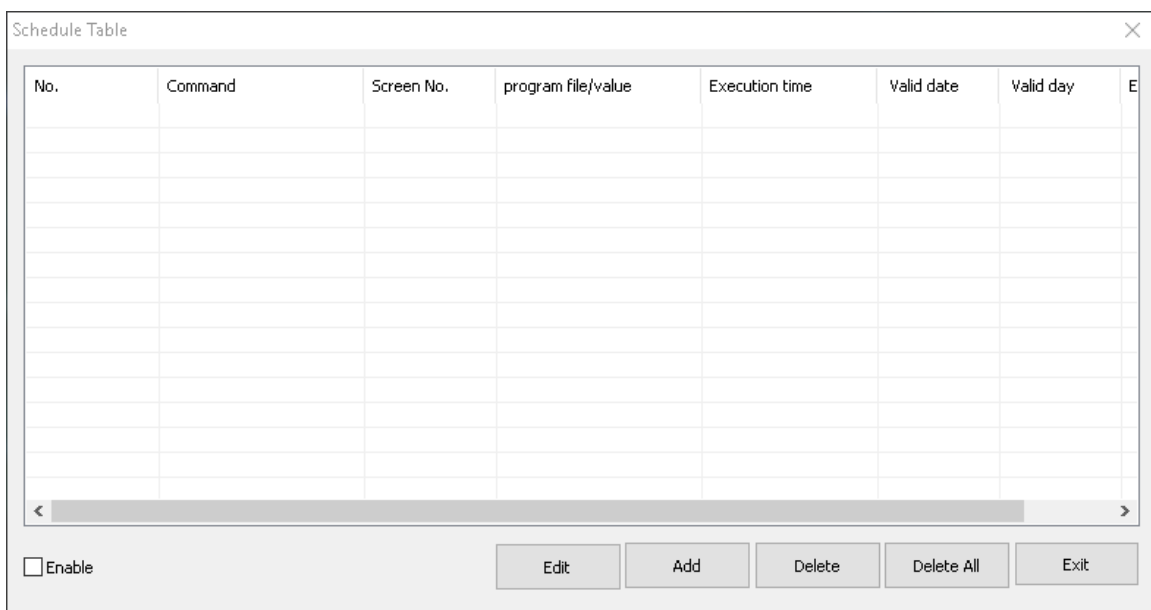


Figure 56

- Edit: to edit the existing command
- Add: to add a new command

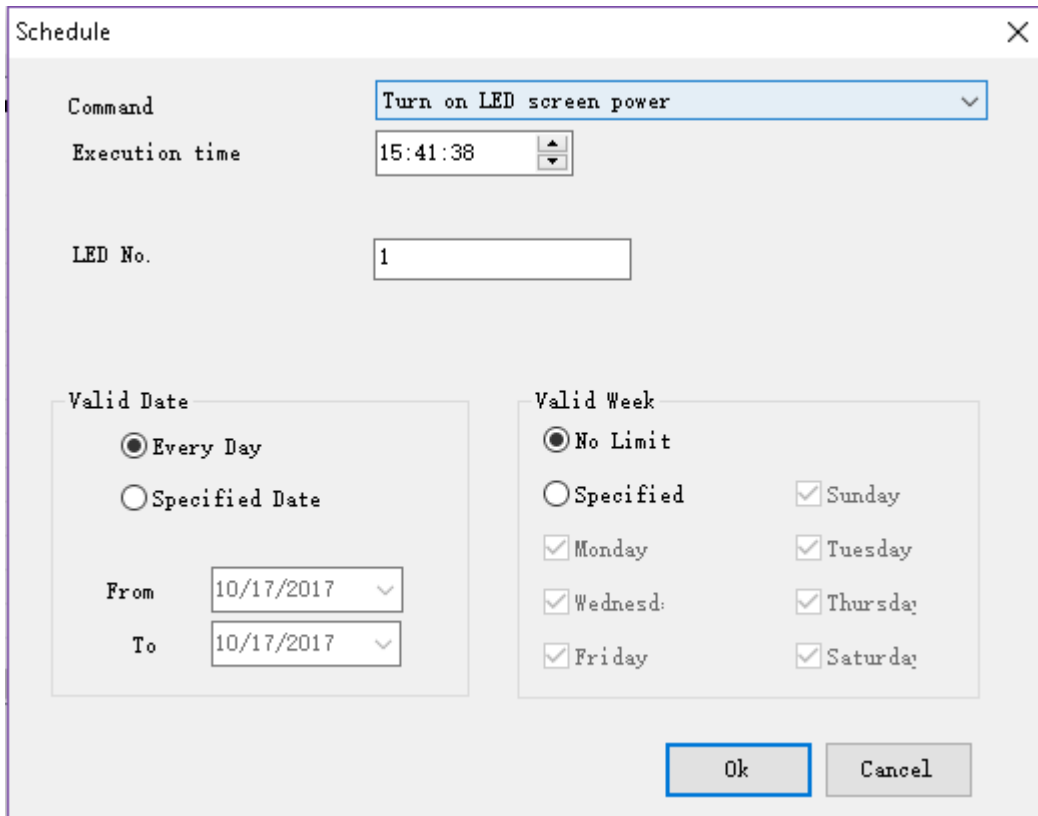

Schedule

Command: Turn on LED screen power

Execution time: 15:41:38

LED No.: 1

Valid Date:

- ☒ Every Day
- ☐ Specified Date

From: 10/17/2017 To: 10/17/2017

Valid Week:


- ☒ No Limit
- ☐ Specified

☒ Sunday
☒ Monday
☒ Tuesday
☒ Wednesday
☒ Thursday
☒ Friday
☒ Saturday

Ok Cancel

Figure 57

- Command: select a command that you need

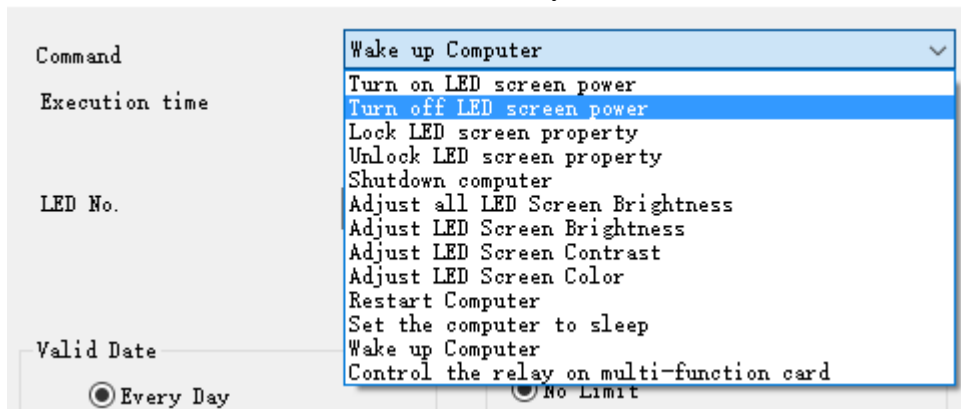

Command: Wake up Computer

Execution time:

LED No.:

Valid Date:

- ☒ Every Day
- ☐ No Limit

Turn on LED screen power
 Turn off LED screen power
 Lock LED screen property
 Unlock LED screen property
 Shutdown computer
 Adjust all LED Screen Brightness
 Adjust LED Screen Brightness
 Adjust LED Screen Contrast
 Adjust LED Screen Color
 Restart Computer
 Set the computer to sleep
 Wake up Computer
 Control the relay on multi-function card

Figure 58

- Execution time: set a specific time
- LED No.: select the LED screen you need
- Valid Date/Valid Week: set a period of days to run the commands
- Delete: delete the selected command
- Delete All: delete all the commands
- Exit



1.3.6. Demonstration mode(reserved)

1.3.7. ClearBlackLine(reserved)

1.4. Help Menu

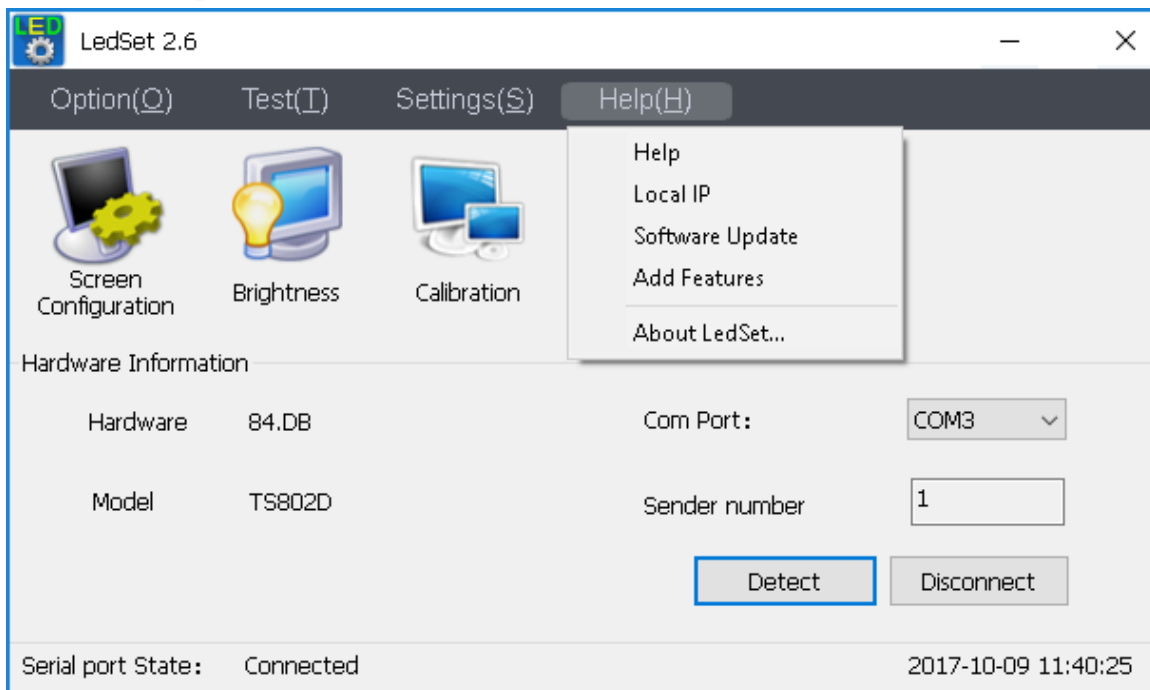


Figure 59

- Help: reserved
- Local IP: obtain IP address of the computer
- Software Update: reserved
- Add Features: reserved
- About LedSet: version and copyright




1.5. Screen Configuration



Shortcut for Screen Configuration, see [page5-16](#) for more details

1.6. Brightness

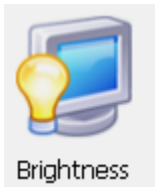

Shortcut for Brightness, see [page17](#) for more details

1.7. Calibration



Shortcut for Calibration, see [page18](#) for more details



1.8. Cabinet Monitoring



Cabinet monitoring is for showing the monitoring data of each cabinet rather than the whole LED screen.

The version will be shown after sending corresponding .CON file.

The other monitoring function(Temperature, humidity, smoke, fan speed, voltage, flat cable status and cabinet door close-open)works with receiving card which integrated with monitoring connectors.

Note: Humidity, smoke, fan speed requires extra monitoring module;

Flat cable detection requires custom hub board.

No.	Version	Temperature	Humidity	Smog	Brightness	Fan1
3	XX	0.000000	0.000000	Normal	0	0
2	XX	0.000000	0.000000	Normal	0	0
1	XX	0.000000	0.000000	Normal	0	0

Figure 60

- **Receiving card type:** the model of receiving card beginning with RV is called **Normal card**
- **Unit:** select the unit for temperature
- **List monitoring:** uncheck to show the info cabinet by cabinet
- **Monitoring Info:** select to just show one type of monitoring info



Monitoring Info
Cabinet version No.
Cabinet Temp
Cabinet Humi
Cabinet Smog
Cabinet Fan
Cabinet Vol
Cabinet Cable
Cabinet Door

Monitoring Info
Cabinet version No.
Cabinet Temp
Cabinet Humi
Cabinet Smog
Cabinet Fan
Cabinet Vol
Cabinet Cable
Cabinet Door

Receiving card type
☒ Normal card
Unit:
☒ Celsius
Display 1

	1	2	3
No.: 3	No.: 2	No.: 1	
Version: XX	Version: XX	Version: XX	

- **Alarm setup:** because of the server problem, this can only function in China

1.9. Multifunction Card

This function works with multifunction card for showing monitoring data of the whole LED screen. In the page below, you can set the sensitivity of light sensor and monitoring speed of multi-function card, etc.

Multi-Function Card

Brightness
Current brightness
255
Min brightness
0
Sensitivity
<
127

Fog
Current
0
Warning Level
127
Status
off
☐ Power off when warning

Humidity
Inner
0.0
Outdoor
0.0

Switch Control
☐ Manual
☐ 1 PowerSw1
☐ 2 PowerSw2
☐ 3 PowerSw3
☐ 4 FanSw1
☐ 5 AirConSw1
☐ 6 FanSw2
☐ 7 AirConSw2
☐ 8 FanSw3
☐ 9 AirConSw3
☐ Rename
☐ Delay

Temperature
Inner
174.1
Outdoor
174.1
Amend
0
Fan-on temperature
133.8000030517
Air conditioning-on temperature
133.8000030517
Fan Status
off
Air conditioning Status
off
Unit
☒ Celsius
☐ Fahrenheit

Speed
87.5

Load from file
Save to file
Save

Figure 61



Note: After you finish installing and setting up the multifunction card and light sensor, enter this page. If the current brightness, temperature and humidity value changes automatically, it means the sensors are working.

1.10. Hardware Information

The hardware information shows correctly only when the USB cable is recognized well by the controlling computer.

Hardware Information

Hardware	Hardware	Com Port:	COM3
Model	Unknown	Sender number	1

Detect Disconnect

Figure 62

If the USB communicates with the PC well, the hardware info will show as follows

Hardware Information

Hardware	84.DB	Com Port:	COM3
Model	TS802D	Sender number	1

Detect Disconnect

Figure 63

And the USB status in **Device Manager** on your computer is working as follows

- Ports (COM & LPT)
 - Silicon Labs CP210x USB to UART Bridge (COM3)

END