# HD 2018 software user manual of USB for PC

HD 2018 download address <u>http://www.huidu.cn/download/</u> Support **WIN XP, WIN7, WIN8, WIN10** 

- 1. Please make sure your U-Disk is ready in your computer.
- 2.Set the parameter of your led screen.

creen Settings Hardware Sett			
narunare Sett	lings		
📃 Use hardware settings(Para	ameter readback)		
Device Name	Card Model	Color	
Default 🔹	НО-Е64 💌	Single Color	•
Width	Height	Gray Level	
160	32	No graylevel	•
Device Name: Default Device ID: 0000000-000-000 Maximum range:Single Color->2			
256*512px Maximum region:20 Maximum width:4096 Maximum he Communication:U Disk Etherne			
			Cancel
een Settings			
creen Settings Hardware Sett	tings		
creen Settings Hardware Sett Panel Scan [[C6]P10		16 (P10) [A8] 🗸 🗙	Device name
	1R/1R1G 1/4S HUB12 32X	16 (P10) [A8] V	Device name
Panel Scan	1R/1R1G 1/4S HUB12 32X		Device name
Panel Scan	1R/1R1G 1/4S HUB12 32X		
Panel Scan	1R/1R1G 1/4S HUB12 32X		Import
Panel Scan	1R/1R1G 1/4S HUB12 32X		Import Export
Panel Scan	1R/1R1G 1/4S HUB12 32X		Import Export Button settings
Panel Scan [[C6]P10 Data Polarity Low Enal	1R/1R1G 1/4S HUB12 32X		Import Export Button settings Smart setting
Panel Scan [[C6]P10 Data Polarity Low Enal	1R/1R1G 1/4S HUB12 32X		Import Export Button settings Smart setting
Panel Scan [[C6]P10 Data Polarity Low Enal	1R/1R1G 1/4S HUB12 32X		Import Export Button settings

## 3.Program Editing

Under the File menu--Display--Program, you can add video,pictures,single line text,multi-lines text, animation characters,3D words,clocks and other areas.

## Note:

- 1.All area in one program play at the same time, and can be overlapped.
- 2.Under the same program, multiple texts can be played in a video/picture area.
- 3.After editing the programs, please send the message to the U-Disk.

🚏 HD2018											
File(F) Settings(S) Operation(O)											
Program 🚺 Text 🕖 T	ime 🛃 HyperText	😝 3D Text 🛛 🔁 Animatic	n 🚺 Excel	Count	Digit	Temp+Humi	A Pray	C Weather			
Adjust Time U Disk	🔐 Preview 🛛 📀 Sen	d 🔾 Search									
🗗 🗗 🗈 🔤 🛛 🔽 🔽	aport To U disk	Color No								Info Window	<b>▲</b> # ×
E Screen1	The screen is exported the U disk	to J								Info On-line	
P HD2018											- 6 ×
File(F) Settings(S) Operation(O)	Tools(T) Language(L	) Help(H)									
🛛 📴 Program 🚺 Text 🕖 1	lime 🚺 HyperText	3D Text 🛞 Animatio	on 🚺 Excel	Count	BBDigit	Temp+Humi	A Pray	🔁 Weather			
🚫 Adjust Time 📔 U Disk	🔐 Preview 🛛 📀 Ser	Export to U disk							×		
	Screen1: 64 X 32 Single	Please select de	vice			•	Local Disk			Info Window	<b>▼</b> # ×
Screen1	5 Sta							•		Info On-line	
Program1	Guaran	Export program			Free Space	0.0	<b>OGB</b> / 0.00GE	3			
- Text1		Device lock			File Size	1.73 KB					
🖃 🔽 🖸 Program2		Device lock			Screen	Screen1					
🕘 Time1		Adjust Time									
Program3					Screen Size	64 * 32					
-🖸 Text1		<ul> <li>Export the parameters</li> </ul>			Color	Single Color					
		~			Gray Level	No graylevel					
			Error / the con Error1 / Error2 / NoFile /		ormat error program con file in the	ntent	ting exceeds	s the control rang			
Region Position	Effect Background For								Table		
Origin X									÷		
Origin Y	Continuous move										^
0	The start attacks										
Width	Single effects										
64							Export	File Car	ncel		
Height	Multiple effects	Vertically open from middle	• Clear In	modiately							
32		recounty open from moure	Clear In	mediately							

4.Please plug the U-Disk to LED Screen, after led screen save and says "USB OK" please pull out the U-Disk, then led screen can display the message that you edit automatically.



# HD 2018 software user manual of WIFI for PC

HD 2018 download address\_http://www.huidu.cn/download/

Support WIN XP, WIN7, WIN8, WIN10

# 1.Connect to led sign

Connect the control card & computer by RJ45 or WIFI. (WIFI password is 88888888).

I.Hardware connection	(Software HD2018)


Screen Settings							×
Screen Settings Har	dware Settings						
Use hardware set							
Device Name Default		Card Model HD-E64		Color	r zle Color		
perault		TD-704	•	2116	gie toior	•	
Width 160		Height 32			Level		
160	×	32	×	No g	graylevel	•	
Screen Settings							×
Screen Settings Har	dware Settings						
Panel Scan	[C6]P10	1R/1R1G	1/4S HUB12	32X16 (P10) [A8]		Device name	
Data Polarity	Low Enable	• 0E 1	Polarity	High Enable	-	Import	
				0850			4
					ОК	Cancel	

The controller itself be used as Hotspot, and the Hotspot is the ID of controller.

#### The default password: 88888888

### 2.Connection checking

Open HD2018, it will auto detect devices like picture below.

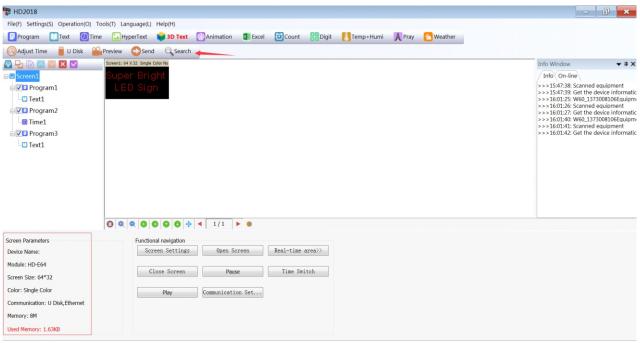

#### 3.Connection setting

Note:

- 1. If there is no receiving card connected, please ignore the C procedure.
- 2. The same row should be with same height, the same column should be with same width.
- 3.Set receiving card by row and column and there sequence.


#### 4. Program Editing

A.Settings--screen parameter settings to modify the device model and screen size.

B.Under the File menu--Display--Program, you can add video,pictures,single line text,multi-lines text, animation characters,3D words,clocks and other areas.

## 5.Send program

After editing the program, please click Send.

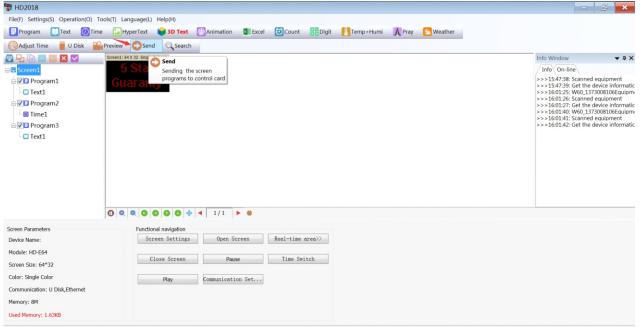

# Phone APP-LedArt User Manual

## Control system: Android, IOS

Please search and control the LedArt in Google Play store for android and in APP Store for IOS. Please scan the QR code to download as below.


# 1.Connect to led sign

A.Connect WIFI of the led sign (Default password:888888888) in the phone settings.

B.Open LedArt, click device, check whether can detect to the led sign or not.

# 2.Program Editing

A.Click Program--New program, add video, text, pictures and clock, send the program.

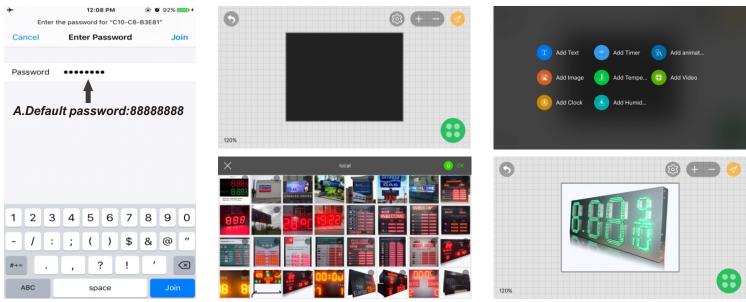

2.Program Editing

B.Add a number of video/picture/text under a region to play in a loop.

C.In addition, you can shake pictures and videos from your phone directly to the screen.

D.Exit the edit program, in the device management, click shake, select the picture of video, plan or shake down the phone immediately sent the screen.

<b>≻</b> Ш	12:12 РМ Program list	• • 93% - +
Ţ	Screen1 Full color C10 256 * 192	
	New program1	
Ŵ	$\uparrow \downarrow$	New Program



